

# ST1-SUM-FC

## Flow Computer



Proprietary Notice

The information contained in this publication is derived in part from proprietary and patent data. This information has been prepared for the expressed purpose of assisting operating and maintenance personnel in the efficient use of the instrument described herein. Publication of this information does not convey any rights to use or reproduce it or to use for any purpose other than in connection with the installation, operation and maintenance of the equipment described herein.

Copyright 1999  
Printed in USA. All Rights Reserved.



WARNING!

This instrument contains electronic components that are susceptible to damage by static electricity. Proper handling\* procedures must be observed during the removal, installation, or handling of internal circuit boards or devices.

\*Handling Procedure

- 1. Power to unit must be removed.
- 2. Personnel must be grounded, via wrist strap or other safe, suitable means, before any printed circuit board or other internal device is installed, removed or adjusted.
- 3. Printed circuit boards must be transported in a conductive bag or other conductive container. Boards must not be removed from protective enclosure until the immediate time of installation. Removed boards must be placed immediately in protective container for transport, storage, or return to factory.

Comments

This instrument is not unique in its content of ESD (electrostatic discharge) sensitive components. Most modern electronic designs contain components that utilize metal oxide technology (NMOS, CMOS, etc.). Experience has proven that even small amounts of static electricity can damage or destroy these devices. Damaged components, even though they appear to function properly, may exhibit early failure.



SAFETY INSTRUCTIONS

The following instructions must be observed.

- This instrument was designed and is checked in accordance with regulations in force EN 60950 (“Safety of information technology equipment, including electrical business equipment”). A hazardous situation may occur if this instrument is not used for its intended purpose or is used incorrectly. Please note operating instructions provided in this manual.
  - The instrument must be installed, operated and maintained by personnel who have been properly trained. Personnel must read and understand this manual prior to installation and operation of the instrument.
  - This instrument is internally fused. Replace the internal fuse with the following specified type and rating only:

| Input Power | Recommended Fuse      |
|-------------|-----------------------|
| 115 VAC     | 160 mA slow blow fuse |
| 230 VAC     | 80 mA slow blow fuse  |
| 12-24 VDC   | 800 mA slow blow fuse |
- Disconnect power supply before replacing fuse!**
- The manufacturer assumes no liability for damage caused by incorrect use of the instrument or for modifications or changes made to the instrument.

Symbols Used On Unit

| Number | Symbol | Publication         | Description  |
|--------|--------|---------------------|--|
| 1      | ==     | IEC 417, No. 5031   | Direct current   |
| 2      |        | IEC 417, No. 5172   | Equipment protected throughout by DOUBLE INSULATION or REINFORCED INSULATION (equivalent to Class II of IEC 536–see annex H) |
| 3      |        | ISO 3864, No. B.3.1 | Caution (refer to accompanying documents)  |

Technical Improvements

- The manufacturer reserves the right to modify technical data without prior notice.

CONTENTS

1. DESCRIPTION

1.1 Unit Description.....1

1.2 Unit Features.....1

1.3 Specifications.....2

2. INSTALLATION

2.1 General Mounting Hints .....6

2.2 Mounting Diagrams .....6

3. APPLICATIONS

3.1 Sum Liquid Volume .....7

3.2 Sum Corrected Liquid Volume .....8

3.3 Sum Liquid Mass.....9

4. WIRING

4.1 Typical Wiring.....10

4.2 Wiring In Hazardous Areas .....11

5. UNIT OPERATION

5.1 Front Panel Operation Concept for Run Mode.....12

5.2 General Operation.....13

5.3 Ratemeter/Totalizer Operation .....13

5.3.1 Password Protection for Rate/Total mode .....13

5.3.2 Relay Operation in Rate/Total mode.....13

5.3.3 Pulse Output in Rate/Total mode .....13

5.3.4 Analog Output in Rate/Total mode .....13

5.3.5 RS-232 Serial Port Operation in Rate/Total mode .....14

5.3.6 RS-485 Serial Port Operation in Rate/Total mode .....14

6. PROGRAMMING

6.1 Front Panel Operation Concept for Program Mode .....15

6.2 Setup Menus.....16

6.3 Setup Sub-Menus .....17

6.3.1 SELECT FLOW EQUATION .....17

6.3.2 SETUP INDICATORS (Total).....17

6.3.3 SETUP INDICATORS (Density).....17

6.3.4 SETUP INDICATORS (Rate) .....18

6.3.5 SETUP INDICATORS (Temperature) .....18

6.3.6 SETUP FLOW INPUT .....19

6.3.7 SETUP AUX1 INPUT .....21

6.3.8 SETUP AUX2 INPUT .....22

6.3.9 SET FLUID PROPERTIES .....23

6.3.10 SETUP PULSE OUTPUT .....24

6.3.11 SETUP ANALOG OUTPUT.....24

6.3.12 SETUP RELAYS .....25

6.3.13 SETUP CONTROL INPUTS .....27

6.3.14 SETUP REALTIME CLOCK(Time).....28

6.3.15 SETUP REALTIME CLOCK(Date).....28

6.3.16 SERIAL USAGE (RS-232/485) .....29

6.3.17 SERIAL USAGE (Modem Options).....29

6.3.18 SET DATALOG/PRINT(Configure) .....30

6.3.19 SET DATALOG/PRINT (Select\_list).....31

6.3.20 ADMINISTRATIVE SETUP .....31

6.3.21 SETUP NETWORK CARD .....32

7. PRINCIPLE OF OPERATION

7.1 General .....33

7.2 Flow Equations.....33

7.3 Calculating the Expansion Factor .....36

7.4 Computation of Viscosity Coef. A and B.....37

7.5 Linearization Table .....38

7.5.1 Linearization Table General Information .....38

7.5.2 Linearization Table for Pulse Inputs.....38

7.5.3 Linearization Table Interpolation .....38

7.6 Universal Viscosity Curve (UVC) .....38

7.7 Strouhal Roshko Curve (StRo).....38

CONTENTS

8. TEST, SERVICE and MAINTENANCE

8.1 Test Menus

8.2 Test Sub-Menus

8.2.1 Audit Trail

8.2.2 Error History

8.2.3 Print System Setup

8.2.4 Keypad test

8.2.5 Display test

8.2.6 Calibrate Aux1 0mA

8.2.7 Calibrate Aux1 20mA

8.2.8 Calibrate Aux2 0mA

8.2.9 Calibrate Aux2 20mA

8.2.10 Calibrate Thermistor: 100 Ohms

8.2.11 Calibrate Thermistor: Open

8.2.12 Calibrate Aux2 0V

8.2.13 Calibrate Aux2 10V

8.2.14 Calibrate 100 ohm RTD

8.2.15 Calibrate 4mA Out

8.2.16 Calibrate 20mA Out

8.2.17 Analog In Test

8.2.18 Pulse input test

8.2.19 Analog out test

8.2.20 Excitation out test

8.2.21 Pulse out test

8.2.22 Relay test

8.2.23 Control input test

8.2.24 Battery Voltage test

8.2.25 Data logger utility

8.3 Internal Fuse Replacement

9. RS-232 SERIAL PORT

9.1 RS-232 Serial Port Description

9.2 Instrument Setup by PC Over Serial Port

9.3 Operation of Serial Communication Port with Printers

9.4 ST1-SUM-FC RS-232 Port Pinout

10. RS-485 SERIAL PORT

10.1 RS-485 Serial Port Description

10.2 General

10.3 Operation of Serial Communication Port with PC

10.4 ST1-SUM-FC RS-485 Port Pinout

11. FLOW COMPUTER SETUP SOFTWARE

11.1 System Requirements

11.2 Cable and Wiring Requirements

11.3 Installation for Windows™

11.4 Using the Flow Computer Setup Software

11.5 File Tab

11.6 Setup Tab

11.7 View Tab

11.8 Misc. Tab

12. GLOSSARY OF TERMS

12 Glossary Of Terms

13. DIAGNOSIS AND TROUBLESHOOTING

13.1 Response of ST1-SUM-FC on Error or Alarm:

13.2 Diagnosis Flow Chart and Troubleshooting

13.3 Error & Warning Messages:

13.3.1 Sensor/Process Alarms

13.3.2 Self Test Alarms

APPENDIX A (FLUID PROPERTIES TABLE)

APPENDIX B (Setup Menus)

APPENDIX C (RS485 Modbus RTU Protocol)

**Unit Description****1. Description****1.1 Unit Description:**

The ST1-SUM-FC Flow Computer is a two channel flow computer intended for calculation of sum flow (A + B) rate and total of two separate lines. It operates with pulse producing flowmeters in liquid applications. The unit displays the rate/total of the Flow Line-A, Flow Line-B and sum of flows (A+B). Multiple flow equations and instrument functions are available in a single unit with many advanced features. Volume Flow, Corrected Volume Flow or Mass Flow calculations can be selected.

The alphanumeric display shows measured and calculated parameters in easy to understand format. Single key direct access to measurements and display scrolling is supported

The ST1-SUM-FC offers a wide measure of versatility within the instrument package. The various hardware inputs and outputs can be “soft” assigned to meet a variety of common application needs. The user “soft selects” the usage of each input/output while configuring the instrument.

The excitation voltage, input termination and input filtering are chosen by means of a menu selection.

The user can assign the standard RS-232 Serial Port for data recording, transaction printing, or for connection to a computer.

Menu selectable linearization options include UVC, Strouhal/Roshko and 40 point linearization tables.

A Service or Test mode is provided to assist the user during start-up system check out by monitoring inputs and exercising outputs and printing system setup.

**Unit Features****1.2 Unit Features:**

The ST1-SUM-FC Flow Computer offers the following features:

- Displays Rate/Total of Meter 1, Meter 2 and Sum of Meter 1 & Meter 2
- Supports Pulse Producing Flowmeters  
Turbine, Positive Displacement, Coriolis, Compound Flowmeters
- Volume, Corrected Volume or Mass Equation
- Universal Viscosity Curve (UVC) and Strouhal/Roshko Advanced Linearization Methods
- API 2540 Equations for Petroleum Fluids
- User Entry of Fluid Properties (10 Selectable)
- Menu Selectable Hardware & Software Features
- Data Logging of Sum of Rate/Total
- Two Line LCD or VFD Display
- Isolated Pulse and Analog Outputs Standard
- RS-232 Port Standard, RS-485 Optional
- Windows™ Setup Software
- DDE Server & HMI Software Available

### 1.3 Specifications:

**Specifications:**

**Flow Meters and Computations**

Meter Types: Supports pulse producing meters including: vortex, single rotor turbine, magnetic, PD flowmeter, Coriolis and compound flowmeters  
 Linearization: 40 point table, UVC table or Strouhal/Roshko  
 Computations: Volume, Corrected Volume & Mass  
 Fluid Computations: Density, Temperature, Viscosity in individual lines when needed

**Environmental**

Operating Temperature: 0°C to +50°C  
 Storage Temperature: -40°C to +85 C  
 Humidity : 0-95% Non-condensing  
 Materials: U.L. approved

**Approvals:** CE Compliant, UL/CUL Listed

**Display**

Type: 2 lines of 20 characters, Blue VFD or Backlit LCD  
 Character Size: 0.2” nominal  
 User programmable label descriptors and units of measure

**Keypad**

Keypad Type: Membrane Keypad with 16 keys  
 Keypad Rating: Sealed to NEMA 4X

**Enclosure**

Size: See Dimensions  
 Depth behind panel: 6.5” including mating connector  
 Type: DIN  
 Materials: Plastic, UL94V-0, Flame retardant  
 Bezel: Textured per matt finish

**Fluid Types**

General Purpose, User entry of fluid properties for up to 10 fluids.

**Real Time Clock**

The ST1-SUM-FC is equipped with a battery backed real time clock with display of time and date.  
 Format:  
     12 or 24 hour time display  
     Day, Month, Year date display

**Excitation Voltage**

Menu Selectable: 5, 12 or 24 VDC @ 100 mA (fault protected with self resetting fuse) DC powered units have limited selections.

**Relay Outputs**

The relay outputs are menu assignable to (Individually for each relay) Low Rate Alarm (sum of rate or sum of total), Hi Rate Alarm (sum of rate or sum of total), Temperature, Density or General purpose warning (security).  
 Number of relays: 2 (4 optional)  
 Contact Style: Form C contacts  
 Contact Ratings: 5 amp, 240 VAC or 30 VDC  
 Capabilities: Alarm Delay, Setpoint, Hysteresis, Duration

**Power Input**

The factory equipped power option is internally fused. An internal line to line filter capacitor and MOV are provided for added transient suppression.

110 VAC Power: 85 to 127 Vrms, 50/60 Hz  
 220 VAC Power: 170 to 276 Vrms, 50/60 Hz  
 DC Power:  
     12 VDC (10 to 14 VDC)  
     24 VDC (14 to 28 VDC)

Power Consumption:  
 AC: 11.0 VA (11W)  
 DC: 300 mA max.

**Flow Inputs:**

**Pulse Inputs:**

Number of Flow Inputs: 2  
 Input Impedance: 10 KΩ nominal  
 Pullup Resistance: 10 KΩ to 5 VDC (menu selectable)  
 Pull Down Resistance: 10 KΩ to common  
 Trigger Level: (menu selectable)  
     High Level Input  
         Logic On: 3 to 30 VDC  
         Logic Off: 0 to 1 VDC  
     Low Level Input (mag pickup)  
         Sensitivity:  
             10 mV or 100 mV  
 Minimum Count Speed:  
     Menu selectable: 1-99 seconds  
 Maximum Count Speed:  
     Menu Selectable: 40Hz, 3000Hz or 20 kHz  
 Overvoltage Protection: 50 VDC

**Control Inputs**

Switch Inputs are menu selectable for Reset, Lock, Inhibit, Alarm Acknowledge, Print, or Not Used.  
 Control Input Specifications  
 Number of Control Inputs: 3  
 Input Scan Rate: 10 scans per second  
 Logic 1: 4 - 30 VDC  
 Logic 0: 0 - 0.8 VDC  
 Input Impedance: 100 KΩ  
 Control Activation:  
     Positive Edge or Pos. Level based on product definition for switch usage.



**Auxiliary / Compensation Inputs**

The auxiliary/compensation inputs are menu selectable for meter 1 temperature, meter 2 temperature or not used. These inputs are used for the compensated inputs when performing compensated flow calculations. They can also be used as a general purpose input for display and alarming.  
 Number of inputs: 2

Operation: Ratiometric  
 Accuracy: 0.02% FS at 20° C  
 Basic Measurement Resolution:  
     16 bit  
 Update Rate: 1 update/sec minimum  
 Automatic Fault detection:  
     Signal Over-range/under-range  
     Current Loop Broken  
     Fault mode to user defined default settings

Fault Protection:  
     Reverse Polarity: No ill effects  
     Over-Voltage Limit (Voltage Input): 50 VDC

Available Input Ranges  
     Current (Two): 4-20 mA, 0-20 mA  
     RTD: (One) 100 Ohm DIN RTD Standard Three Wire  
     Thermistor (One) - Consult Factory

**Isolated Analog Output**

The analog output is menu assignable to correspond to the Sum Rate/Total, Temperature, Density.  
 Type: Isolated Current Sourcing  
 Available Ranges: 4-20 mA, 0-20 mA  
 Resolution: 12 bit  
 Accuracy: 0.05% FS at 20° C  
 Update Rate: 1 update/sec minimum  
 Temperature Drift: Less than 200 ppm/C  
 Maximum Load: 1000 ohms (at nominal line voltage)  
 Compliance Effect: Less than .05% Span  
 60 Hz rejection: 40 dB minimum  
 Calibration: Operator assisted Learn Mode  
 Averaging: User entry of damping constant to cause a smooth control action

**Isolated Pulse output**

The isolated pulse output is menu assignable to Sum Total.  
 Pulse Output Form: Photo MOS Relay  
 Maximum On Current: 100 mA  
 Maximum Off Voltage: 30 VDC  
 Saturation Voltage: 1.0 VDC  
 Maximum Off Current: 0.1 mA  
 Pulse Duration: 10 mSec or 100 mSec (user selectable)  
 Pulse output buffer: 256  
 Fault Protection  
     Reverse polarity: Shunt Diode

**Serial Communication**

The serial port can be used for printing, data recording, and/or communication with a computer.  
 RS-232:  
     Device ID: 01-99  
     Baud Rates: 300, 600, 1200, 2400, 4800, 9600, 19200  
     Parity: None, Odd, Even  
     Handshaking: None, Software, Hardware  
     Print Setup: Configurable print list and formatting  
 RS-485: (optional 2nd COM port)  
     Device ID: 01-247  
     Baud Rates: 2400, 4800, 9600, 19200  
     Parity: None, Odd, Even  
     Protocol: Modbus RTU (Half Duplex)

**Setup CD Capabilities**

Capabilities include: View Live Results Configure unit, Upload and Download to unit, Load and Save to file, Print Setup,

**Data Logging Capabilities**

Capabilities:  
     Permits unit to automatically gather data during use.  
 Data Log List:  
     User selectable: includes Meter1/Meter2 Temperatures, Meter 1/Meter 2 Density, Meter 1/Meter 2 Viscosity, Meter 1, Meter 2 and Sum Ratemeters/Totalizers, Grand Totalizer, Time and Date, Fluid, Setpoint 1 & 2, Frequency 1 & 2, K-Factor 1 & 2.  
 Data Log Event Trigger:  
     selectable: includes interval, time of day, front key, external contact  
 Data Log Format:  
     selectable: Printer format, Database CSV format  
 Data Transmission:  
     Selectable: Output may be transmitted immediately or held in data log for later polling  
 Remote Request Capabilities include:  
     Send data log, clear data log

**External Modem Support Capabilities:**

Compatibility: Hayes Compatible  
 Polling Capabilities:  
     Answers incoming calls, responds to requests for information of action  
 Call Out Capabilities:  
     Can initiate call on user selectable event condition, or upon error  
 Error Handling:  
     Supports multiple retry, automatic disconnect upon loss of line or remote inactivity

## Operating Mode

The Flow Computer can be thought of as making a series of measurements of the Flow1 and Flow2 flow and temperature sensors and then performing calculations to arrive at a result(s) which is then updated periodically on the display. The analog output, the pulse output, and the alarm relays are also updated. The cycle then repeats itself.

**Step 1:** Update the measurements of input signals-  
Raw Input Measurements are made at each input using equations based on input signal type selected. The system notes the “out of range” input signal as an alarm condition. The unit alternates between Flow1 and Flow2 measurements.

**Step 2:** Compute the Flowing Fluid Parameters-  
The temperature, viscosity, and density equations are computed as needed based on the flow equation and input usage selected by the user.

**Step 3 :** Compute the Volumetric Flow-  
Uncompensated flow is the term given to the flow in volume units. The value is computed based on the flowmeter input type selected and augmented by any performance enhancing linearization that has been specified by the user.

**Step 4:** Compute the Corrected Volume Flow at Reference Conditions-  
In the case of a corrected volume flow calculation, the Flow1, Flow2 and Sum corrected volume flows are computed as required by the selected compensation equation.

**Step 5 :** Compute the Mass Flow-  
All required information is now available to compute the Flow1, Flow2 and Sum mass flow rates as volume flow times reference density.

**Step 6:** Check Flow Alarms-  
The flow alarm functions have been assigned to either the Sum flow rate or temperatures during the setup of the instrument. A comparison is now made by comparing the current flow rates against the specified hi and low limits.

**Step 7:** Compute the Analog Output-  
This Sum flow rate or Sum total value is now used to compute the analog output.

**Step 8:** Compute the individual Flow Totals by Summation-  
A flow total increment is computed for each totalizer. The totalizer format also includes provisions for total rollover.

**Step 9:** Total Preset Comparisons-  
The Sum total associated with a preset function is then compared against the corresponding preset value and any required control actions taken.

**Step 10:** Pulse Output Service-  
The pulse output is next updated by scaling the Sum total increment which has just been determined by the pulse output scaler and summing it to any residual pulse output amount.

**Step 11:** Update Display and Printer Output-  
The instrument finally runs a task to update the various table entries associated with the front panel display and serial outputs.

## Setup Mode

The setup mode is password protected by means of numeric operator and supervisor lock out codes established by the user. In addition, a secret, manufacturers numeric unlock entry sequence is available. A jumper on Control Input 3 can also prevent access.

The system also provides a minimum implementation of an “audit trail” which tracks significant setup changes to the unit. This feature is increasingly being found of benefit to users or simply required by Weights and Measurement Officials in systems used in commerce, trade, or “custody transfer” applications.

A software program is also available which runs on a PC using a RS-232 Serial for connection to the Flow Computer. Illustrative examples may be downloaded in this manner.

The setup mode has numerous subgrouping of parameters needed for flow calculations. There is a well conceived hierarchy to the setup parameter list. Selections made at the beginning of the setup affect offerings further down in the lists.

In the setup mode, the flow computer activates the correct setup variables based on the instrument configuration, the flow equation, and the hardware selections made for the compensation transmitter type, the flow transmitter type, and meter enhancements (linearization) options selected. All required setup parameters are enabled. All setup parameters not required are suppressed.

A help line prompt is provided for each entry. In addition a help message is available which may be accessed by depressing the “HELP” key.

Also note that in the setup mode are parameter selections which have preassigned industry standard values. The unit will assume these values unless they are modified by the user.

Most of the process input variables have available a “default” or emergency value which must be entered. These are the values that the unit assumes when a malfunction is determined to have occurred on the corresponding input.

It is possible to enter in a nominal constant value for temperature or density by placing the desired nominal value into both the lo and hi values. This is also a convenience when performing bench top tests without simulators.



**Maintenance (Test) Mode:**

The Maintenance Mode of the ST1-SUM-FC is the Test and Calibration Mode for the device. This mode provides a number of specialized utilities required for factory calibration, instrument checkout on start-up, and periodic calibration documentation.

A supervisor password is required to gain access to this specialized mode of operation. Normally quality, calibration, and maintenance personnel will find this mode of operation very useful. It is also useful for factory testing.

Many of these tests may be used during start-up of a new system. Inputs signals may be read, and output signals may be exercised to verify the electrical interconnects before the entire system is put on line.

The following action items may be performed in the Maintenance Mode:

- Print Calibration/Maintenance Report
- Examine Audit Trail
- Perform Keypad Checkout
- Perform Display Checkout
- Perform Pulse Input Checkout
- Perform Pulse Output Checkout
- Perform Control Input Checkout
- Perform Relay Output Checkout
- Perform Analog Input Checkout
- Perform Analog Output Checkout
- Calibrate Analog Inputs using the Learn Feature
- Calibrate Analog Output using the Learn Feature
- Battery Check
- Datalog Printing and Clearing

Note that a calibration of the analog input/output will advance the audit trail counters since it effects the accuracy of the system.

**RS-232 Serial Port**

The ST1-SUM-FC has a general purpose RS-232 Port which may be used for any one of the following purposes:

- Transaction Printing
- Periodic Printing of Datalog
- Print Internal Datalog
- Remote Metering by Modem (optional)
- Computer Communication Link
- Configuration by Computer
- Print System Setup
- Print Calibration/Malfunction History
- Remote Control

**Instrument Setup by PC's over Serial Port**

A Setup program is provided with the ST1-SUM-FC that enables the user to rapidly configure the ST1-SUM-FC using a Personnel Computer. Included in the setup software are common instrument applications which may be used as a starting point for your application. This permits the user to have an excellent starting point and helps speed the user through the instrument setup.

**Operation of Serial Communication Port with Printers**

ST1-SUM-FC's RS-232 channel supports a number of operating modes. One of these modes is intended to support operation with a printer in metering applications requiring transaction printing, data logging, and/or printing of calibration and maintenance reports.

For transaction printing, the user defines the items to be included in the printed document. The user can also select what initiates the transaction print generated as part of the setup of the instrument. The transaction document may be initiated via a front panel key depression, a remote contact closure.

In data logging, the user defines the items to be included in each data log as a print list. The user can also select when or how often he wishes a data log to be made. This is done during the setup of the instrument as either a time of day or as a time interval between logging.

The system setup and maintenance report lists all the instrument setup parameters and usage for the current instrument configuration. In addition, the Audit trail information is presented along with a status report listing any observed malfunctions which have not been corrected.

The user initiates the printing of this report at a designated point in the menu by pressing the print key on the front panel.

**Operation of Serial Port with Modems (optional)**

The ST1-SUM-FC RS-232 channel supports a number of operating modes. One of these modes is intended to support operation with a modem in remote metering applications.

An external modem is intentionally being used with the ST1-SUM-FC. This permits use with the variety of modem standards worldwide while avoiding the specialized approvals required for equipment that is deemed to fall under the category of telecommunication equipment.

In the modem mode, the ST1-SUM-FC is assumed to be operating in a remote metering role. The ST1-SUM-FC will support key items in the Hayes Compatible "AT" Command Set. In this role, the ST1-SUM-FC will have the following special abilities:

0. Monitor the modem status as a task of the system
1. Instruct the modem to answer an incoming call ATA
2. Respond to the calling modem at the programmed baud rate and protocol
3. Terminate the telephone connection in event the connection is lost.

In addition, the ST1-SUM-FC is capable of initiating a call to a designated telephone number in the event of a metering malfunction. Consult factory for additional details on remote metering software.

2. Installation

General Mounting Hints

2.1 General Mounting Hints:

The ST1-SUM-FC Flow Computer should be located in an area with a clean, dry atmosphere which is relatively free of shock and vibration. The unit is installed in a 5.43" (138mm) wide by 2.68" (68mm) high panel cutout. (see Mounting Dimensions) To mount the Flow Computer, proceed as follows:

Mounting Procedure

- a. Prepare the panel opening.
- b. Slide the unit through the panel cutout until the it touches the panel.
- c. Install the screws (provided) in the mounting bracket and slip the bracket over the rear of the case until it snaps in place.
- d. Tighten the screws firmly to attach the bezel to the panel. 3 in. lb. of torque must be applied and the bezel must be parallel to the panel.

Termination Connectors:

Minimum Wire Gauge: 22 AWG  
Maximum Wire Gauge: 14 AWG  
Voltage/current limits are limited by unit specifications.

Permanently Connected Equipment:

UL 3101-1, Section 6.12.2.1 specifies that:

- A switch or circuit breaker shall be included in the building installation;
- It shall be in close proximity to the equipment and within easy reach of the OPERATOR;
- It shall be marked as the disconnecting device for the equipment.


Ensure that the switch or circuit breaker chosen is suitable for the power requirements of the unit.



NOTE:

Bezel Adaptor Instructions:

To provide protection type IP65/NEMA 4X, the unit has to be mounted with the bezel adaptor and the gasket (supplied with the mounting kit). The bezel has to be glued to the unit with silicon (see Figure below)

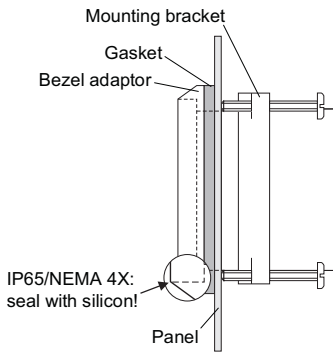

2.2 Mounting Diagrams:

**Standard Mounting**

**Bezel Kit Mounting**

**Dimensions**

Dimensions are in inches (mm)

3. Applications

Sum Liquid Volume

3.1 Sum Liquid Volume


**Measurements:**  
Flowmeter sensors measure the actual volume in the Flow1 and Flow2 liquid lines. A temperature sensor can also be installed to correct for UVC or STRO linearization of turbine flowmeters. Coriolis flowmeters will typically use this equation for mass flow as well.

**Calculations:**  
• Volume flow is calculated using the flowmeter frequency output and the user entered K-Factor.  
Sum Flow = Flow1 + Flow2

**Output Results:**  
• Display Results  
Flow1, Flow2, Sum Flow Rates, Sum Total, Resettable Totals, Non-Resettable Totals  
• Analog Output  
Sum Rate or Sum Total  
• Pulse Output  
Sum Total  
• Relay Outputs  
Sum Rate or Sum Total Alarms

**Applications:**  
The Flow Computer can monitor actual the sum volume flow and total of any liquid. (Common applications include mixing manifolds and compound flowmeters) Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

Sum Liquid Volume  
Illustration

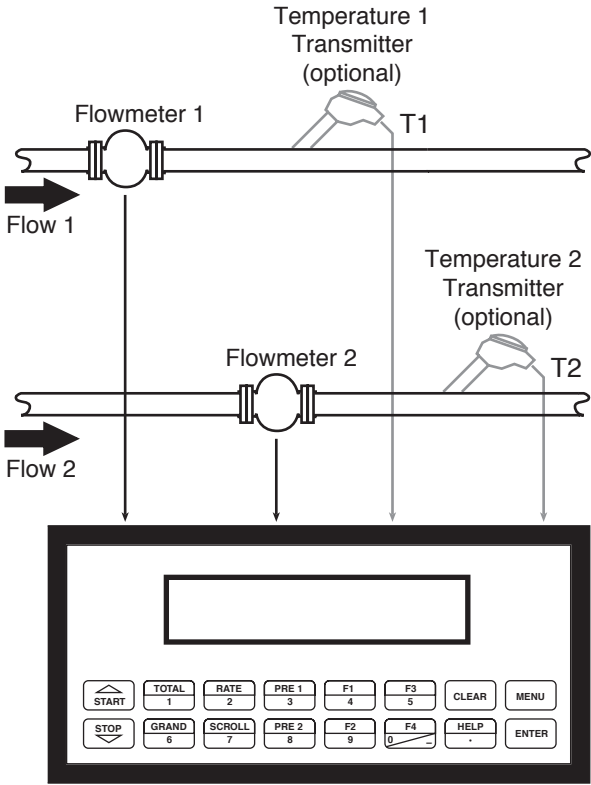

Calculations

Pulse Input; Average K-Factor

Flow1 or Flow2 Volume Flow = 
$$\frac{\text{input frequency} \cdot \text{time scale factor}}{\text{K-Factor}}$$

Sum Flow = Flow1 + Flow2

Sum Corrected  
Liquid Volume

3.2 Sum Corrected Liquid Volume

Measurements:

Flowmeter sensors measure the actual volume in two separate liquid lines. A temperature sensor is installed to correct for liquid thermal fluid expansion in each line as well as optional UVC or STRO linearization of turbine flowmeters.

Calculations:

- Flow1 and Flow2 Corrected Volume at a base or reference condition is calculated using the respective flow and temperature inputs as well as the thermal fluid expansion coefficient stored in the flow computer. Use the "SET FLUID PROPERTIES" submenu to define reference temperature and density values for standard conditions.  
Sum Flow = Flow1 + Flow2


Output Results:

- Display Results  
Flow1, Flow2, Sum Corrected Flow Rates, Resettable Totals, Non-Resettable Totals, Temperatures, Densities
- Analog Output  
Sum Corrected Rate or Total
- Pulse Output  
Sum Corrected Total
- Relay Outputs  
Sum Corrected Rate , Total or Temperature Alarms

Applications:

Monitoring corrected volume flow and total of any liquid. (Common applications include mixing manifolds and compound flowmeters) Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

Sum Corrected  
Liquid Volume  
Illustration

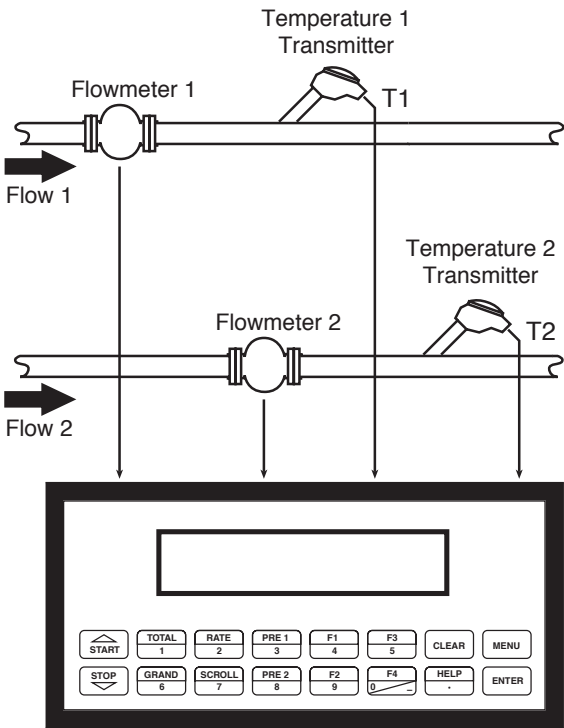

Calculations

Flow1 and Flow2 Volume Flows

As calculated in section 3.1

Corrected Volume Flow (Temp. Transmitter)

Flow1/Flow2 Corrected Vol. Flow = vol. flow \* (1 - Therm.Exp.Coef. \*(Tf-Tref))<sup>2</sup>  
(See also API 2540 equation)

Sum Corrected Flow = Flow1 Corrected Flow + Flow2 Corrected Flow

Sum Liquid Mass

3.3 Sum Liquid Mass

Measurements:

Flow1 and Flow2 actual volumes are measured by the respective flow element. Flow1 and Flow2 temperatures are measured by the Flow1 and Flow2 temperature transmitters.

Calculations:

- The density and mass flow are measured directly or calculated using the reference density and the thermal expansion coefficient of the liquid as well as optional UVC or STRO linearization of turbine flowmeters (see "SET FLUID PROPERTIES" submenu)


Output Results:

- Display Results  
Flow1, Flow2, Sum Mass Flow Rates, Resettable Totals, Non-Resettable Totals, Temperatures, Densities
- Analog Output  
Sum Mass Rate, Total
- Pulse Output  
Sum Mass Total
- Relay Outputs  
Sum Mass Flow Rate, Total, Temperature or Alarms

Applications:

Monitoring of the sum mass flow and total of any liquid. (Common applications include mixing manifolds and compound flowmeters). Flow alarms are provided via relays and datalogging is available via analog (4-20mA) and serial outputs.

Sum Liquid Mass  
Illustration

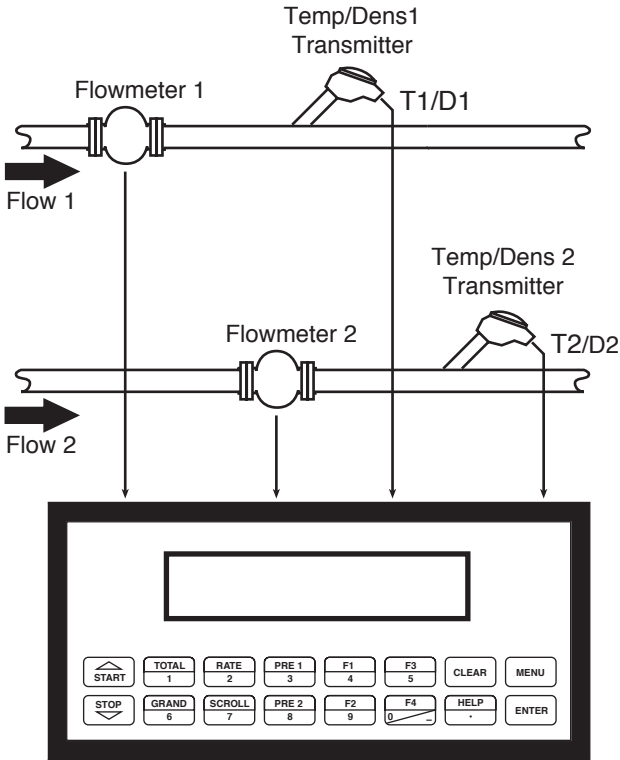

Calculations

Flow1 and Flow2 Volume Flows

As calculated in section 3.1


Mass Flow

$$\text{Sum Mass Flow} = (\text{Flow1 volume flow} * \text{Flow1 density}) + (\text{Flow2 volume flow} * \text{Flow2 density})$$



4 WIRING


4.1 Typical Wiring:

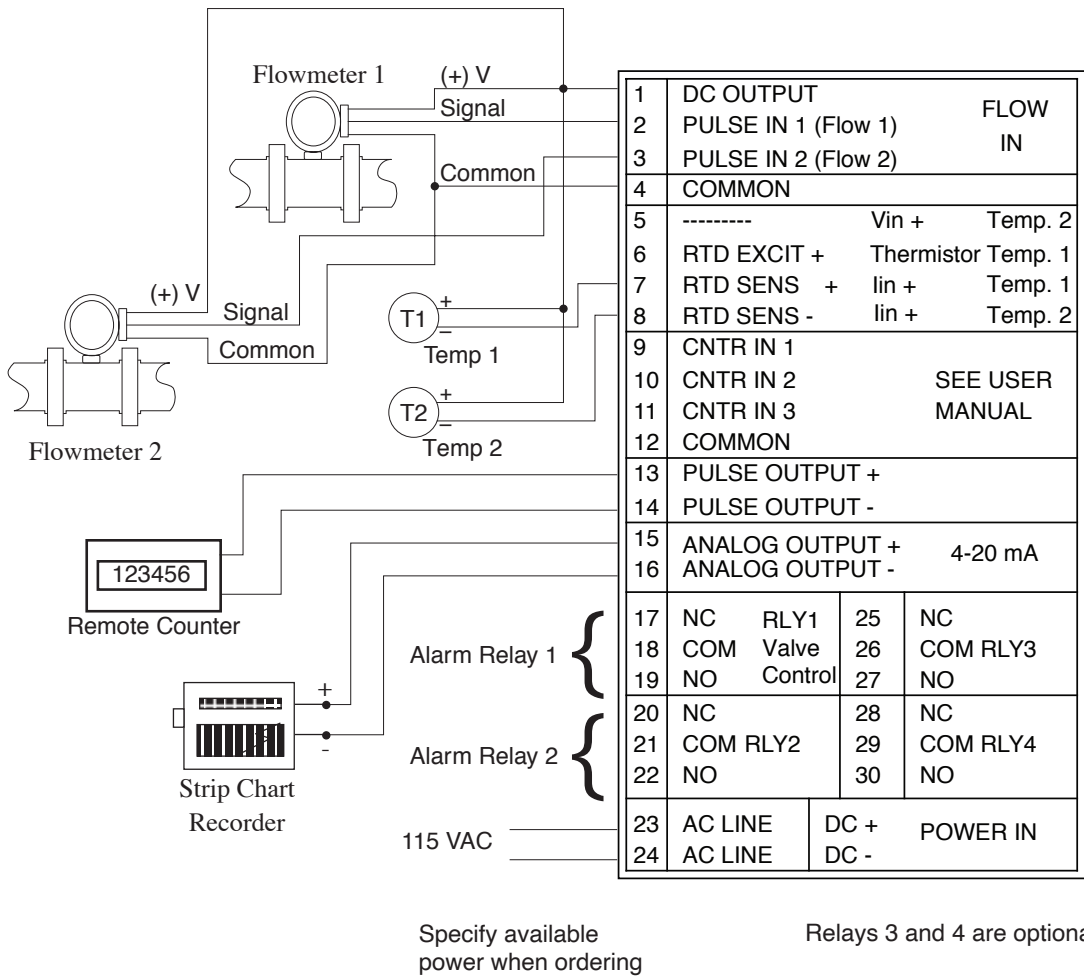


4.2 Wiring In Hazardous Areas:

Examples using MLT787S+ Barrier

Flow1  
Temperature Input  
(4-20mA Transmitter)

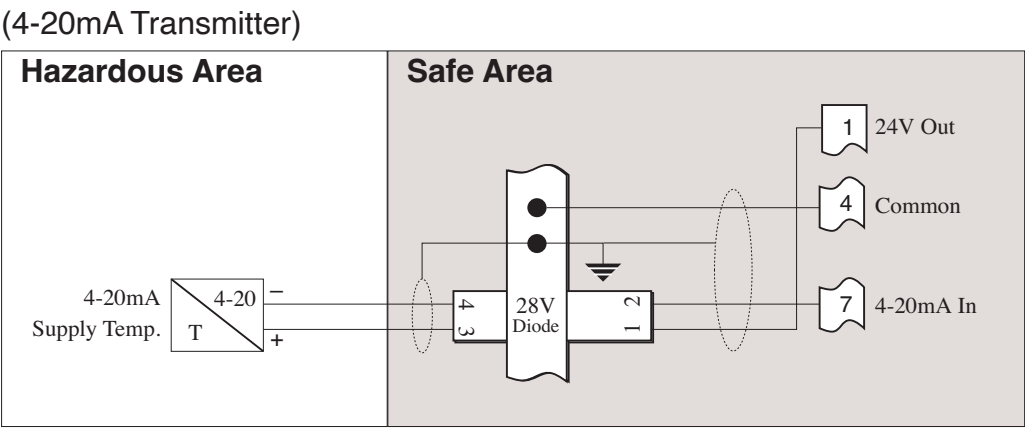


Flow2  
Temperature Input  
(4-20mA Transmitter)

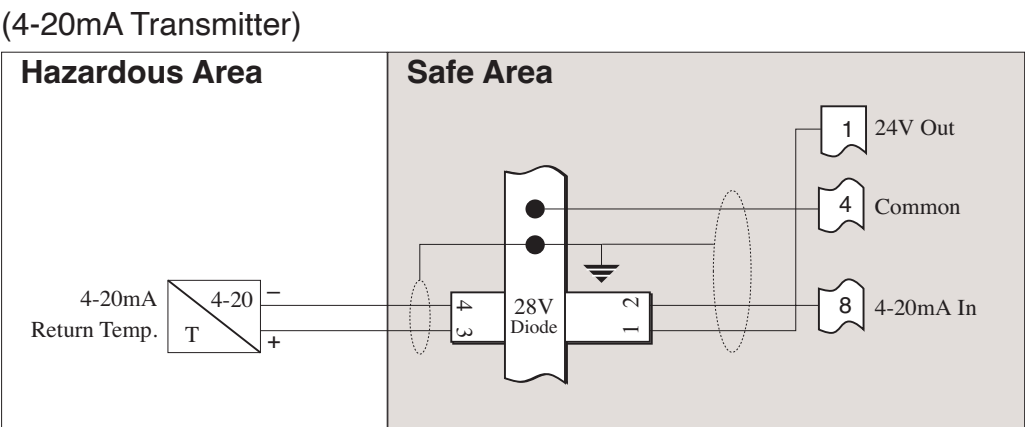

5. UNIT OPERATION

5.1 Front Panel Operation Concept for Run Mode

The ST1-SUM-FC is fully programmable through the front panel. Please re-view the following usage summary before attempting to use the instrument.

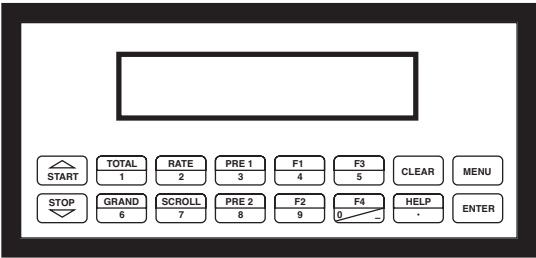

|  |   |
|--|---|
| How To Use On-Line Help  | <p><b>HELP</b></p> <p>On-line help is provided to assist the operator in using this product. The help is available during RUN and SETUP modes simply by pressing the HELP key. The HELP key is used to enter decimals when entering numeric values.</p>   |
| How To Select Fluid  | <p><b>SELECT FLUID</b></p> <p>Press F1 and ENTER. Press the Δ ▽ keys to view fluid name. Press ENTER to select fluid.</p>   |
| How To Use Function Keys   | <p><b>FUNCTION KEYS</b></p> <p>In the RUN mode, several keys have a special, direct access feature, to display an item of interest (i.e. RATE, TOTAL, etc.). Press the key to view your choice. These keys and the F1, F2 &amp; F3 keys allow the operator to view more than one piece of information. Slowly pressing these keys additional times will display additional information. Example: Rate Key shows Sum Rate, Flow1 Rate, Flow2 Rate.</p>   |
| How To Clear The Sum Total, Flow1 Total, Flow2 Total                   | <p><b>CLEARING TOTALIZERS</b></p> <p>To clear the totals, you must press the TOTAL Function Key quickly 4 times until you see a display called "CLEAR TOTAL". Then press CLEAR to reset Sum, Flow1 and Flow2 totals. You will be asked to verify this action. The operator will be prompted to enter password if the unit is locked.</p>  |
| How To Clear The Sum Grand Total, Flow1 Grand Total, Flow2 Grand Total | <p><b>CLEARING GRAND TOTALS</b></p> <p>To clear the grand totals, you must press the GRAND Function Key quickly 4 times until you see a display called "CLEAR GRAND TOTAL". Then press CLEAR to reset Sum, Flow1 and Flow2 grand totals. You will be asked to verify this action. The supervisor will be prompted to enter the supervisor password if the unit is locked.</p>   |
| How To Enter Presets   | <p><b>PRESET KEYS</b></p> <p>In the RUN mode, PRE 1 &amp; PRE 2 keys are used to view and/or change the preset setpoints. To view the Presets, simply press the desired Preset key. Rapidly press the Preset keys 3 times, then press the Clear key for direct editing of the preset setpoints.</p>   |
| How To Create a Scroll List  | <p><b>SCROLL</b></p> <p>Rapidly press the Scroll key three times to setup a display list. Press the CLEAR key to remove old scroll list. Press the function key F3 for the item you wish to add. Use the Δ ▽ keys to assign the line or to remove the selection.</p>  |
| How To Use The F3 Print Key  | <p><b>PRINT</b></p> <p>The PRINT key is used to print on demand. When the F3 Print key is pressed, a user defined list of data (Sum TOTAL, Sum RATE, PRE 1, etc.) is sent to the RS-232 port. A timed message of "PRINTING" will be displayed to acknowledge the print request.</p>   |
| How To Use The Menu Key  | <p><b>MENU KEY</b></p> <p>The MENU key is used to enter the Setup and Test modes. Press the MENU key to enter the Setup and Test modes. (See section 6 for Setup mode, section 8 for Test mode). The MENU key is also used as "escape" in Setup and Test Programming. Pressing the MENU key while programming in the Sub-Menu groups will backup the display to that Sub-Menu group heading. Pressing the MENU key while viewing the Sub-Menu groups will backup the display to the Top Level Menu.</p>                     |
| How To Acknowledge Alarms  | <p><b>ACKNOWLEDGING ALARMS</b></p> <p>Most alarm messages are self-clearing. Press the ENTER key to acknowledge and clear alarms.</p> <p>NOTE: Some keys and functions are password protected. Enter the password to gain access. The passwords are factory set as follows:</p> <div><div>Operator = 0</div><div>Supervisor = 2000</div></div> <p>Alarms in the Alarm Error History will reassert themselves when power is cycled. Clear the alarm history to prevent this from happening once all problems are solved.</p> |

**General  
Operation**

**5.2 General Operation**

The unit can display: Sum Rate, Sum Total, Sum Grand Total, Flow1 and Flow2 Rates, Flow1 and Flow2 Totals, Flow1 and Flow2 Temperatures/Densities/Viscosities, Presets and Time of Day. In addition, input frequencies, computed K-factors and viscosities can be observed. The Flow1 and Flow2 Temperatures and Densities can be displayed even if you are using the Volumetric Flow Equation (a Temperature sensor must be installed). The unit can perform Mass or Corrected Volume equations using a temperature sensor (these equations can be computed without Temp sensors by using user defined default values). If only one temperature is being used that value will be assigned for both the Flow1 and Flow2 lines.

**Rate/Total  
Operation**

**5.3 Ratemeter/Totalizer Operation**

The Ratemeter/Totalizer mode is used primarily to monitor Sum flowrate and Sum accumulated total. The relays can be used to trigger flow, total or temperature alarms.

**Password Protection  
(Rate/Total mode)**

**5.3.1 Password Protection for Rate/Total mode**

After an Operator and/or Supervisor Password is entered in the setup mode (see section 6.4.23, ADMINISTRATIVE SETUP submenu), the unit will be locked. The unit will prompt the user for the password when trying to perform the following functions:

- Clear Total
- Clear Grand Total
- Enter Menu
- Edit Preset 1 (PRE 1 Key)
- Edit Preset 2 (PRE 2 Key)

The Supervisor password should be reserved for supervisors. The Supervisor password will allow access to restricted areas of the Setup and Test menus.

**Relay Operation  
(Rate/Total mode)**

**5.3.2 Relay Operation in Rate/Total mode**

Up to four relays are available (two standard) for alarm outputs. The relays can be assigned to trip according to Sum rate, Sum total or alarms. The relays can be programmed for low or high alarms. Preset 1 (RLY1) and Preset 2 (RLY2) are easily accessible by pressing the PRE 1 or PRE 2 key on the front panel. Preset 3 and Preset 4 are accessible only through the setup menu. Relays 3 and 4 can be used for temperature alarms and general system alarms.

**Pulse Output  
(Rate/Total mode)**

**5.3.3 Pulse Output in Rate/Total mode**

The isolated pulse output (open collector) is menu assignable to Sum Total or None. The total will be implied by the Flow Equation selected: Volume, Corrected Volume or Mass. The pulse output duration can be set for 10mS (50 Hz max) or 100mS (5 Hz max). A pulse output scale factor (pulse value) can be set to scale the pulse output. The pulse output is ideal for connecting to remote totalizers or other devices such as a PLC. See section 1.3 for electrical specifications.

**Analog Output  
(Rate/Total mode)**

**5.3.4 Analog Output in Rate/Total mode**

The analog output is menu assignable to correspond to the Sum Volume Rate, Sum Corrected Volume Rate or Sum Mass Rate, Sum Volume Total or Sum Corrected Volume Total or Sum Mass Total, Flow1 Temperature or Computed Flow1 Density. The analog output is ideal for "trend" tracking using strip chart recorders or other devices.

**RS-232 Serial Port**  
(Rate/Total mode)**5.3.5 RS-232 Serial Port Operation in Rate/Total mode**

The RS-232 serial port can be used for programming (using the Setup Program) or for communicating to printers and computers in the Operating Mode (Run Mode).

**PC Communications:**

The Setup Program also allows the user to query the unit for operating status such as Sum Flow Rate, Sum Flow Total, Temperature, Density, Presets, etc.

**Operation of RS-232 Serial Port with Printers:**Transaction Printing

For transaction printing, the user defines the items to be included in the printed document (see section 6.3.20 SET DATA OUTPUT, Select\_list). The transaction document can be initiated by pressing the F3 PRINT key or by a remote contact closure on Control Input 3.

Data Logging

In data logging, the user defines the items to be included in each data log (see section 6.3.20 SET PRINTER OUTPUT, Select\_list). The user can also select when (time of day) or how often (print interval) the data log is to be made (see section 6.3.19 SET PRINTER OUTPUT, Configure). Data logs can also be initiated using the F3 print key or control input.

System Setup and Maintenance Report

The system setup and maintenance report lists all of the instrument setup parameters and usage for the current instrument configuration. The audit trail information and a status report is also printed. This report is initiated in the Test menu (see section 8.2.3 PRINT SYSTEM SETUP).

**RS-485 Serial Port**  
(Rate/Total mode)**5.3.6 RS-485 Serial Port (optional)****RS-485 Port Description:**

The optional RS-485 card utilizes Modbus RTU protocol to access a variety of process parameters and totalizers. The Relays can be controlled via Modbus. In addition, action routines (such as totalizer reset) can be executed. For further information, contact factory and request RS-485 Protocol manual.

**Operation of Serial Communication Port with PC**

The ST1-SUM-FC's RS-485 channel supports a number of Modbus RTU commands. Modbus RTU drivers are available for a variety of Man Machine Interface software for IBM compatible PC's.

The user reads and writes information from/to the RS-485 using the Modbus RTU register and coil commands. The ST1-SUM-FC then responds to these information and command requests.


Process variables and totalizers are read in register pairs in IEEE 32 bit floating point format. Time and date are read as a series of integer register values. Alarms are individually read as coils. Action routines are initiated by writing to coils.



6. PROGRAMMING

6.1 Front Panel Operation Concept for Program Mode

The ST1-SUM-FC is fully programmable through the front panel. Please review the following usage summary before attempting to use the instrument. Refer to Appendix B as an aid in locating individual sub-menus.

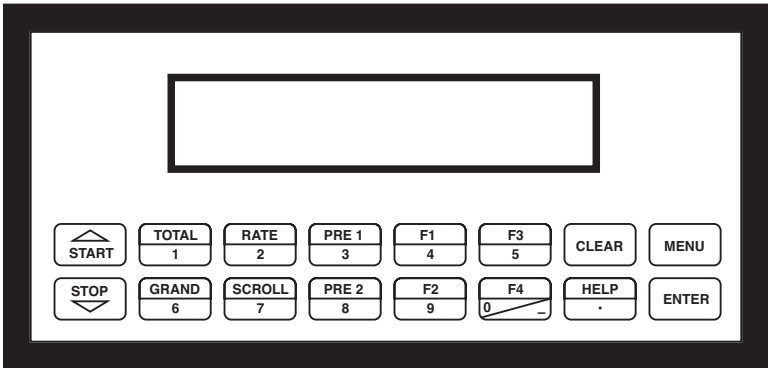

Setup Mode:

How To Make Mode Changes

**MODE CHANGES**  
Pressing the MENU key will offer selections of RUN, SETUP, TEST. RUN is the normal operating mode for the instrument. SETUP offers various sub-menus used for instrument setup. TEST offers various sub-menus for Test, Calibration and System Start-up.

How To Navigate Through Sub-Menu Groups

**Submenu GROUP NAVIGATION**  
Use the UP and DOWN arrow keys to navigate up and down through the Sub-Menu groups when in the SETUP or TEST mode. Press the ENTER key to enter a desired setup or test Sub-Menu group.

How To Select Program Choices

**SELECTION OF ITEM**  
During setup, the unit will often offer multiple choices for a given topic. The topic prompt appears on the top line of the display. The choices are shown on the lower line of the display.  
**To select an item, press the key beneath the desired choice. The selected choice will blink. Press the ENTER key to accept the selected choice.**

How To Enter Numeric Values

**NUMERIC ENTRY**  
The keys labeled "0 - 9", "-", ".", CLEAR and ENTER are used to enter numerical values. A leading 0 will assume that you intend to enter a minus "-" sign. Press the CLEAR key to clear the existing value and to enable editing.

How To Enter Text Characters














**TEXT CHARACTER ENTRY**  
Some setup items (i.e. Descriptors, Units Label) require the user to enter text characters. Press CLEAR to enable editing. The UP and DOWN arrow keys are used to scroll through the available character sets for each individual character. Press the ENTER key to accept the character and advance to the next character until all characters needed for the label have been entered.

6.2 Setup Menus

| Menus                            | Display  | Notes   |
|----------------------------------|--|---|
| 6.2.1<br>Top Level Setup<br>Menu | <div>SELECT OPERATE STATE<br/>Run Setup Test</div> <div>MENUENTER</div>                | Select Setup to enter the instrument setup routine. |
|                                  | <div>START</div> <div>SELECT FLOW EQUATION</div> <div>STOPSTART</div>                  | Refer to Page 17 for Details.                       |
| 6.2.2<br>Submenu<br>Groups       | <div>STOPSTART</div> <div>SETUP INDICATORS</div> <div>STOPSTART</div>                  | Refer to Pages 17-18 for Details.                   |
|                                  | <div>STOPSTART</div> <div>SETUP FLOW INPUT</div> <div>STOPSTART</div>                  | Refer to Pages 19-20 for Details.                   |
|                                  | <div>STOPSTART</div> <div>SETUP AUX1 INPUT<br/>(Flow1 Temp)</div> <div>STOPSTART</div> | Refer to Page 21 for Details.                       |
|                                  | <div>STOPSTART</div> <div>SETUP AUX2 INPUT<br/>(Flow2 Temp)</div> <div>STOPSTART</div> | Refer to Pages 22 for Details.                      |
|                                  | <div>STOPSTART</div> <div>SET FLUID PROPERTIES</div> <div>STOPSTART</div>              | Refer to Pages 23 for Details.                      |
|                                  | <div>STOPSTART</div> <div>SETUP PULSE OUTPUT</div> <div>STOPSTART</div>                | Refer to Page 24 for Details.                       |
|                                  | <div>STOPSTART</div> <div>SETUP ANALOG OUTPUT</div> <div>STOPSTART</div>               | Refer to Pages 24 for Details.                      |
|                                  | <div>STOPSTART</div> <div>SETUP RELAYS</div> <div>STOPSTART</div>                      | Refer to Pages 25-26 for Details.                   |
|                                  | <div>STOPSTART</div> <div>SETUP CONTROL INPUTS</div> <div>STOPSTART</div>              | Refer to Page 27 for Details.                       |
|                                  | <div>STOPSTART</div> <div>SETUP REALTIME CLOCK</div> <div>STOPSTART</div>              | Refer to Page 28 for Details.                       |
|                                  | <div>STOPSTART</div> <div>SERIAL USAGE</div> <div>STOPSTART</div>                      | Refer to Page 29 for Details.                       |
|                                  | <div>STOPSTART</div> <div>SETUP DATALOG/PRINT</div> <div>STOPSTART</div>               | Refer to Pages 30-31 for Details.                   |
|                                  | <div>STOPSTART</div> <div>ADMINISTRATIVE SETUP</div> <div>STOPSTART</div>              | Refer to Pages 31 for Details.                      |
|                                  | <div>STOPSTART</div> <div>SETUP NETWORK CARD</div> <div>STOPSTART</div>                | Refer to Page 32 for Details.*                      |

\* Optional Menu only appears if option is installed

6.3 Setup Sub-Menus

| Sub-menus                                 | Display  | Notes  |
|---|--|--|
| 6.3.1<br>SELECT<br>FLOW EQUATION          | SELECT FLOW EQUATION<br>                        | Press ENTER to enter Select Flow Equation submenus.                      |
|   | SELECT FLOW EQUATION<br>Volume Mass Cor/Vol<br> | Press ENTER when desired flow equation is flashing.                      |
|   | DENS EXTRACT METHOD<br>Therm_Coef API_2540<br>  | Press ENTER when desired density extraction method is flashing.          |
|   | Advance To<br>SETUP INDICATORS (Total)   |  |
| 6.3.2<br>SETUP<br>INDICATORS<br>(Total)   | SETUP INDICATORS<br>                            | Press ENTER to begin setup of the Indicators                             |
|   | SETUP INDICATORS<br>Total Dens Rate Temp<br>  | Press ENTER when Total is flashing to configure the Totalizer Indicators |
|   | TOTAL DESCRIPTOR<br>TOTAL<br>                 | Enter the desired Total Descriptor                                       |
|   | VOLUME UNITS<br>gal<br>                       | Enter the desired Volume Units Label for the Totalizer.                  |
|   | TOT DEC PLACES (0-3)<br>0<br>                 | Select the desired Total Decimal Place.<br>0-3 decimal places allowed.   |
|   | Advance To<br>SETUP INDICATORS (Density)   |  |
| 6.3.3<br>SETUP<br>INDICATORS<br>(Density) | SETUP INDICATORS<br>Total Dens Rate Temp<br>  | Press ENTER when Dens is flashing to configure the Density Indicators.   |
|   | DENSITY DESCRIPTOR<br>DENS<br>                | Enter the desired Density Descriptor.                                    |
|   | MASS UNITS<br>lbs<br>                         | Enter the desired Mass Units Label for Density.                          |
|   | DENS DEC PLACES(0-6)<br>4<br>                 | Select the desired Density Decimal Place.<br>0-6 decimal places allowed. |
|   | DENSITY DEFAULT<br>1 lbs/g<br>                | Enter the default density setting.                                       |
|   | Advance To<br>SETUP INDICATORS (Rate)  |  |

| Sub-menus                                  | Display   | Notes  |
|--|---|--|
| 6.3.4<br>SETUP INDICATORS<br>(Rate)        | <div>SETUP INDICATORS</div> <div>Total Dens <b>Rate</b> Temp</div> <div>ENTER</div> | Press ENTER when Rate is flashing to configure the Ratemeter Indicators  |
|  | <div>RATE TIME BASE</div> <div>Sec Min Hour Day</div> <div>ENTER</div>              | Select the desired Rate Time Base.   |
|  | <div>RATE DESCRIPTOR</div> <div>RATE</div> <div>ENTER</div>                         | Enter the desired Descriptor for the Ratemeter.  |
|  | <div>RATE DEC PLACES(0-3)</div> <div>2</div> <div>ENTER</div>                       | Select the desired Rate Decimal Place. 0-3 decimal places allowed.   |
|  | <div>RATE AVG FILTER</div> <div>0</div> <div>ENTER</div>                            | Enter desired Rate Averaging Filter for Flow1/ Flow2 rates.  |
|  | <div>QUICK UPDATE %</div> <div>1</div> <div>ENTER</div>                             | Enter desired Percent of Change for Quick Update. If the current Flow1/Flow2 flowrate deviates by an amount greater than the percentage value entered, the Rate Averaging is restarted with new value. |
|  | Advance To<br>SETUP INDICATORS<br>(Temperature)                                     |  |
| 6.3.5<br>SETUP INDICATORS<br>(Temperature) | <div>SETUP INDICATORS</div> <div>Total Dens Rate <b>Temp</b></div> <div>ENTER</div> | Press ENTER when Temp is flashing to configure the Temperature Indicators.   |
|  | <div>TEMP DESCRIPTOR</div> <div>TEMP</div> <div>ENTER</div>                         | Enter the desired Temperature Descriptor.  |
|  | <div>TEMPERATURE SCALE</div> <div>Deg_C Deg_F</div> <div>ENTER</div>                | Enter the desired Temperature Scale.   |
|  | <div>TEMP DEC PLACES(0-3)</div> <div>1</div> <div>ENTER</div>                       | Select the desired Temperature Decimal Place. 0-3 decimal places allowed.  |
|  | <div>TEMPERATURE DEFAULT</div> <div>60 F</div> <div>ENTER</div>                     | Enter the default temperature  |
|  | Advance To<br>SETUP FLOW INPUT  |  |

| Submenus                     | Display   | Notes  |
|------------------------------|---|--|
| 6.3.6<br>SETUP<br>FLOW INPUT | SETUP FLOW INPUT  | Press ENTER to begin setup of Flow Input.  |
|                              | ENTER   |  |
|                              | EXCITATION VOLTAGE<br>5v      12v      24v                | Select the desired Excitation Voltage.<br>NOTE: DC models do not support the 24V selection.  |
|                              | ENTER   |  |
|                              | PULSE TRIGGER LEVEL<br>10mV      100mV      2.5V          | Select the desired Input Pulse Trigger Level.  |
|                              | ENTER   |  |
|                              | LOW PASS FILTER<br>40Hz      3KHz      20KHz              | Select the desired Low Pass Filter.<br>(Max. Count Speed).   |
|                              | ENTER   |  |
|                              | INPUT TERMINATION<br>Pullup Pulldown None                 | Select the proper input termination.   |
|                              | ENTER   |  |
|                              | MAX WINDOW (1-99)<br>1 sec                                | Enter the desired Maximum Sample Window Time (1-99 sec).   |
|                              | ENTER   |  |
|                              | K_FACTOR TYPE<br>AvgK LinTbl UVC StRo                     | Enter the desired K-Factor Type. See side note.  |
|                              | ENTER   |  |
|                              | AVERAGE KA-FACTOR<br>##### P/gal                          | If Avg selected, Enter the desired Average K-Factor (KA for Flow1).  |
|                              | AVERAGE KB-FACTOR<br>##### P/gal                          | Enter the desired Average K-Factor (KB for Flow2).   |
|                              | CHANGE TABLE A<br>No      Yes                             | If LinTbl selected, Select YES to change that table  |
|                              | Through 40 Points<br>LINEAR TABLE KA<br>Fre01:##### Hz    | Enter the desired frequency/ K-Factor pair (in ascending order of Hz) for each point in the Linearization Table. (Table A = Flow1)<br><b>NOTE:</b> Enter 0 for Fre value of any point (other than Fre01) to exit the routine and use only the values entered up to that point. |
|                              | ENTER   |  |
|                              | LINEAR TABLE KA<br>KA--01:##### P/gal                     | Enter the desired frequency/ K-Factor pair (in ascending order of Hz) for each point in the Linearization Table. (Table B = Flow2)<br><b>NOTE:</b> Enter 0 for Fre value of any point (other than Fre01) to exit the routine and use only the values entered up to that point. |
|                              | ENTER   |  |
|                              | CHANGE TABLE A<br>No      Yes                             |  |
|                              | Through 40 Points<br>LINEAR TABLE KA<br>Fre01:##### Hz    |  |
|                              | ENTER   |  |
|                              | LINEAR TABLE KA<br>KA--01:##### P/gal                     |  |
|                              | ENTER   |  |
|                              | Through 40 Points<br>LINEAR TABLE KA<br>Fre01:##### Hz/ck |  |
|                              | ENTER   |  |
|                              | LINEAR TABLE KA<br>KA--01:##### P/gal                     |  |
|                              | ENTER   |  |
|                              | Through 40 Points<br>LINEAR TABLE KB<br>Fre01:##### Hz/ck |  |
|                              | ENTER   |  |
|                              | LINEAR TABLE KB<br>KB--01:##### P/gal                     |  |
|                              | ENTER   |  |
|                              | Continued On Next Page                                    |  |

NOTE:  
AvgK = Average  
K-Factor  
LinTbl = Linearization  
Table  
UVC = Universal Vis-  
cosity Curve  
StRo = Strouhal Ro-  
shko Curve



| Sub-menus                                   | Display  | Notes   |
|---|--|---|
| 6.3.6<br>SETUP<br>FLOW INPUT<br>(continued) | <div>Through 40 Points</div> <div>LINEAR TABLE KB<br/>RoB01:#####</div> <div>ENTER</div> | If StRo selected,<br>Enter the desired St/ Ro pair (in ascending<br>order of St/Ro) for each point in the<br>Linearization Table. (Table A Is Flow1; Table B<br>is Flow2) |
|   | <div>LINEAR TABLE KB<br/>StB01:#####</div> <div>ENTER</div>                              |   |
|   | <div>Through 40 Points</div> <div>LINEAR TABLE KB<br/>RoB01:#####</div> <div>ENTER</div> | <b>NOTE:</b> Enter 0 for Ro value of any point (other<br>than RoA01) to exit the routine and use<br>the values entered up to that point.                                  |
|   | <div>LINEAR TABLE KB<br/>StB01:#####</div> <div>ENTER</div>                              |   |
|   | <div>LOW FLOW RATE ALARM<br/>##### gal/s</div> <div>ENTER</div>                          | Enter the desired volumetric Low Rate Alarm.<br>This will trigger a visual message if alarm<br>conditions occur. The relays are not affected.                             |
|   | <div>HIGH FLOW RATE ALARM<br/>##### gal/s</div> <div>ENTER</div>                         | Enter the desired volumetric High Rate Alarm.<br>This will trigger an alarm message if alarm<br>conditions occur. The relays are not affected.                            |
|   | <div>METER EXPAN [xe - 6]<br/>0 ppm/f</div> <div>ENTER</div>                             | If UVC or StRo selected, Enter the expansion<br>coefficient for the meter housing.  |
|   | <div>CALIBRATION TEMPERATURE<br/>70 F</div> <div>ENTER</div>                             | If UVC or StRo selected, Enter the calibration<br>temperature.  |
|   | <div>H2O DENSITY AT 4 DEG C<br/>8.34519 lbs/g</div> <div>ENTER</div>                     | If UVC or StRo selected, Enter the density of<br>water at 4° C.   |
|   | Advance To<br>SETUP AUX1 INPUT   |   |

Sub-menus

Display

Notes

6.3.7  
SETUP AUX1 INPUT

SETUP AUX1 INPUT

Press ENTER to begin setup of the Auxiliary 1 Input corresponding to Flow1 temperature.



AUX1 INPUT TYPE  
None Temp

Select "Temp" to indicate a temperature transmitter will be used on the Flow1 line.



AUX1 SIGNAL TYPE  
Therm. Current RTD

If "Temp" selected, Choose Signal Type: Thermistor, Current Range or RTD. (Skip if "None" selected)



CURRENT RANGE  
4-20mA 0-20mA

If "Current" selected, Choose applicable Current Range for the transmitter. (Skip if "None" selected)



AUX1 LOW SCALE  
##### F

Enter the low temperature scale corresponding to the low temperature signal.



AUX1 FULL SCALE  
##### F

Enter the high temperature scale corresponding to the high temperature signal.



AUX1 Offset Temp  
##### F

Enter the Low Offset Temperature. to correct for any small errors observed in the measurement on Flow1 temperature.



AUX1 LOW ALARM  
##### F

Enter the Low setpoint for the Temperature Alarm warning to the operator.



AUX1 HIGH ALARM  
##### F











Enter the High setpoint for the Temperature Alarm warning to the operator.



Advance To  
SETUP AUX2 INPUT

| Sub-menus  | Display                            | Notes  |
|--|------------------------------------|--|
| 6.3.8<br>SETUP AUX 2 INPUT                           | SETUP AUX2 INPUT                   | Press ENTER to begin setup of the Auxiliary 2 Input corresponding to Flow2 temperature.  |
| <b>NOTE:</b><br>If "None" selected:<br>TEMP2 = TEMP1 | <div>ENTER</div>                   |  |
|  | AUX2 INPUT TYPE<br>NoneTempAUX1    | Select "Temp" to indicate a temperature transmitter will be used on the Flow2 line or else use AUX1 for Flow2 Temperature as well. |
|  | <div>ENTER</div>                   |  |
|  | AUX2 SIGNAL TYPE<br>VoltageCurrent | If "Temp" selected, Choose Voltage or Current for the transmitter input type. (Skip if "None" selected)                            |
|  | <div>ENTER</div>                   |  |
|  | VOLTAGE RANGE<br>0-10V0-5V1-5V     | If "Voltage" selected, Choose applicable Voltage Range for the transmitter.  |
|  | <div>ENTER</div>                   |  |
|  | CURRENT RANGE<br>4-20mA0-20mA      | If "Current" selected, Choose applicable Current Range for the transmitter.  |
|  | <div>ENTER</div>                   |  |
|  | AUX2 LOW SCALE<br>#####F           | Enter the low temperature scale corresponding to the low temperature signal.   |
|  | <div>ENTER</div>                   |  |
|  | AUX2 FULL SCALE<br>#####F          | Enter the high temperature scale corresponding to the high temperature signal.   |
|  | <div>ENTER</div>                   |  |
|  | AUX2 LOW ALARM<br>#####F           | Enter the Low setpoint for the Temperature Alarm warning to the operator.  |
|  | <div>ENTER</div>                   |  |
|  | AUX2 HIGH ALARM<br>#####F          | Enter the High setpoint for the Temperature Alarm warning to the operator.   |
|  | <div>ENTER</div>                   |  |
| Advance To<br>SET FLUID PROPERTIES                   |                                    |  |

| Sub-menus                        | Display                          | Notes   |
|----------------------------------|----------------------------------|---|
| 6.3.9<br>SET FLUID<br>PROPERTIES | SET FLUID PROPERTIES             | Press ENTER at this prompt to Set Fluid Properties.   |
|                                  | <div>ENTER</div>                 |   |
|                                  | FLUID NUMBER (0-9)<br>0          | Up to 10 Fluid types may be stored in the unit. Select the number of the desired fluid to edit.   |
|                                  | <div>ENTER</div>                 |   |
|                                  | FLUID NAME<br>Generic #0         | Shows name and number of fluid selected. Enter the desired name using the up/down arrow keys.   |
|                                  | <div>ENTER</div>                 |   |
|                                  | REF. DENSITY<br>##### lbs/g      | Enter the Reference Density. This is used in the calculation of density when you have a temp transmitter and used for corrected flow calculation if you have a density transmitter. |
|                                  | <div>ENTER</div>                 |   |
|                                  | REF. TEMPERATURE<br>##### F      | Enter the Reference Temperature.  |
|                                  | <div>ENTER</div>                 |   |
|                                  | EXPAN. FACTOR [xe-6]<br>#####    | Enter the proper Fluid Expansion Factor. (If Temp Compensated for Mass or Corrected Volume) See Section 7.3, Calculating the Fluid Expansion Factor.                                |
|                                  | <div>ENTER</div>                 |   |
|                                  | VISCOSITY COEF. A<br>0.000       | Enter the Viscosity A Coefficient. See section 7.4, Computation of Viscosity Coef. A and B.   |
|                                  | <div>ENTER</div>                 |   |
|                                  | VISCOSITY COEF. B<br>0.000       | Enter the Viscosity B Coefficient. See section 7.4, Computation of Viscosity Coef. A and B.   |
|                                  | <div>ENTER</div>                 |   |
|                                  | Advance To<br>SETUP PULSE OUTPUT | NOTE: The propertire for several common fluids are listed in Appendix A. These are also included in the setup software.   |

| Sub-menus                        | Display   | Notes  |
|----------------------------------|---|--|
| 6.3.10<br>SETUP<br>PULSE OUTPUT  | SETUP PULSE OUTPUT  | Press ENTER at this prompt to setup the Pulse Output.  |
|                                  |    |  |
|                                  | PULSE OUTPUT USAGE<br>Off Total   | Select the desired Pulse Output Usage. "Total" corresponds to Sum Total.   |
|                                  |    |  |
|                                  | PULSE WIDTH<br>10mS 100mS   | Select the desired Pulse Width for the Pulse Output.   |
|                                  |    |  |
|                                  | PULSE VALUE<br>##### gal/P  | Enter the desired Pulse Value for the Pulse Output (Units per Pulse).  |
|                                  |    |  |
|                                  | Advance To<br>SETUP ANALOG OUTPUT   |  |
| 6.3.11<br>SETUP<br>ANALOG OUTPUT | SETUP ANALOG OUTPUT   | Press ENTER when Analog is flashing to setup the Analog Output.  |
|                                  |  |  |
|                                  | ANALOG OUTPUT USAGE<br>Rate Tot Temp Dens   | Select the desired Analog Output Usage. "Rate" corresponds to Sum Rate   |
|                                  |  |  |
|                                  | ANALOG OUTPUT RANGE<br>4-20mA 0-20mA  | Select the desired current range for the Analog Output.  |
|                                  |  |  |
|                                  | LS ANALOG OUTPUT<br>##### gal/m   | Enter desired Analog Output Low Scale Value. <b>NOTE:</b> Units label will correspond with output usage type selected. |
|                                  |  |  |
|                                  | FS ANALOG OUT 20mA<br>##### gal/m   | Enter desired Analog Output Full Scale Value.  |
|                                  |  |  |
|                                  | ANALOG OUT DAMPING<br>0.0   | Enter the desired Analog Output Damping Constant. Increase value to slow response time and eliminate "bounce".         |
|                                  |  |  |
|                                  | Advance To<br>SETUP RELAYS  |  |

Sub-menus

Display

Notes

6.3.12  
SETUP RELAYS  
(Relay 1 & Relay 2)

SETUP RELAYS  
R1y1 R1y2 R1y3 R1y4

ENTER

RELAY 1 USAGE  
RATE TOTAL NA

ENTER

RELAY 1 DELAY sec  
0

ENTER

RELAY 1 MODE  
LO\_ALARM HI\_ALARM

ENTER

RELAY 1 DURATION  
#####

ENTER

RELAY 1 SETPOINT  
##### gal

ENTER

RELAY 1 HYSTERESIS  
##### gal/m

ENTER

Advance To  
SETUP RELAYS 3, 4

Select the desired Relay for setup.  
(Relays 3 & 4 Optional)

If Relay 1 or Relay 2 Selected,  
Select Sum Rate, Sum Total or Not Assigned.

If Rate selected, enter desired relay activation  
delay value.

Select the desired Relay Activation.  
Low: Relay activates when Sum reading is  
below setpoint.  
High: Relay activates when Sum reading is  
above setpoint.

If Sum Total Selected, Enter desired Relay  
Duration for Alarm. "0" will latch Alarm  
indefinitely.

Enter the desired Setpoint. The Setpoint can  
be edited in run mode using the PRE 1 key  
(PRE 2 key for Relay 2).

If Sum Rate, selected, Enter desired Relay  
Hysteresis.



| Sub-menus   | Display   | Notes  |
|---|---|--|
| 6.3.12 (Continued)<br>SETUP RELAYS<br>(Relay 3 & Relay 4)   | <div>SETUP RELAYS</div> <div>R1y1 R1y2 R1y3 R1y4</div> <div>ENTER</div>   | Select the desired Relay for setup.<br>(Relays 3 & 4 Optional)   |
| <b>NOTE:</b><br>Settings for Relays 3 & 4 may be entered even if relays are not supplied. The settings will still trigger display alarms. | <div>RELAY 3 USAGE</div> <div>Rate Total Aux NA</div>                     | If Relay 3 Selected,<br>Choose Rate, Total, Aux or NA.   |
|   | <div>RELAY 4 USAGE</div> <div>Rate Tot Aux Alrm NA</div> <div>ENTER</div> | If Relay 4 Selected,<br>Choose Rate, Total, Aux, Alrm or NA.   |
|   | <div>ASSIGN AUX CHANNEL</div> <div>AUX 1 AUX 2</div> <div>ENTER</div>     | If Aux selected, enter desired auxilliary channel.   |
|   | <div>RELAY 3 DELAY</div> <div>sec</div> <div>0</div> <div>ENTER</div>     | If Rate / Aux selected, enter desired relay activation delay value.  |
|   | <div>RELAY 3 MODE</div> <div>LO_ALARM HI_ALARM</div> <div>ENTER</div>     | Select the desired Relay Activation for Rate/Aux.<br>Low: Relay activates when Sum reading is below setpoint.<br>High: Relay activates when Sum reading is above setpoint. |
|   | <div>RELAY 3 DURATION</div> <div>#####</div> <div>ENTER</div>             | If Sum Total Selected, Enter desired Relay Duration.   |
|   | <div>RELAY 3 SETPOINT</div> <div>##### gal</div> <div>ENTER</div>         | Enter the desired Setpoint.  |
|   | <div>RELAY 3 HYSTERESIS</div> <div>##### gal/m</div> <div>ENTER</div>     | If Sum Rate, selected, Enter desired Relay Hysteresis.   |
| Advance To<br>SETUP CONTROL INPUTS  |   |  |

RELAY NOTES & CONSIDERATIONS

- Relay activation is based on the computed readings not the displayed value. Therefore the display damping factor will not affect the relay response time. The RELAY DELAY feature allows the user to enter a time delay for relay activation. This feature is very useful in applications where short over/under range conditions are not considered alarm conditions.
- Setting the relays to NA (Not Assigned), will allow the relay activation to be controlled via the RS-232 Serial and/or RS-485 Modbus ports.
- Relay 3 and Relay 4 settings may be used to trigger display alarm conditions to the operator even if the relays are not supplied.

| Sub-menus                         | Display   | Notes   |
|-----------------------------------|---|---|
| 6.3.13<br>SETUP CONTROL<br>INPUTS | <div>SETUP CONTROL INPUTS</div> <div><div>ENTER</div></div>   | Press Enter to begin setup of the Control Inputs.   |
|                                   | <div>SETUP CONTROL INPUTS<br/>Input1 Input2 Input3</div> <div><div>ENTER</div></div>  | Select the desired Control Input for setup.   |
|                                   | <div>CONTROL INPUT1 USAGE<br/>INHIBIT_TOTAL NA</div>  | If Control Input 1 Selected,<br>Select Inhibit Total or NA (Not Assigned).  |
|                                   | <div>CONTROL INPUT2 USAGE<br/>RESET_TOTAL NA</div>  | If Control Input 2 Selected,<br>Select Reset Total or NA (Not Assigned).  |
|                                   | <div>CONTROL INPUT3 USAGE<br/>Prn Ack KeyLk NA</div> <div><div>ENTER</div></div> <div>Advance To<br/>SETUP REALTIME CLOCK</div> | If Control Input 3 Selected,<br>Select Prn (Print), Ack (acknowledge alarm),<br>KeyLk (Keylock) or NA (Not Assigned). ACK<br>will acknowledge and clear alarms and<br>warning messages. The Alarm History is <b><u>NOT</u></b><br>cleared.<br><br><b>Note:</b> Alarms may reassert themselves if<br>alarm conditions are still present. |

| Sub-menus                                   | Display   | Notes   |
|---|---|---|
| 6.3.14<br>SETUP REALTIME<br>CLOCK<br>(Time) | <div>SETUP REALTIME CLOCK</div> <div>ENTER</div>  | Press Enter to begin setup of the Realtime Clock.     |
|   | <div>SETUP REALTIME CLOCK<br/>TimeDate</div> <div>ENTER</div>   | Select Time to set the time.                          |
|   | <div>CLOCK TYPE<br/>24HR12HR</div> <div>ENTER</div>   | Select 24Hr or 12Hr clock                             |
|   | <div>SELECT CLOCK AM/PM<br/>AMPM</div> <div>ENTER</div>   | If 12Hr Clock, Enter AM or PM                         |
|   | <div>TIME OF DAY HH:MM:SS<br/>##:##:##</div> <div>ENTER</div> <div>Advance To<br/>SETUP REALTIME CLOCK<br/>(Date)</div> | Enter time of day.                                    |
| 6.3.15<br>SETUP REALTIME<br>CLOCK<br>(Date) | <div>SETUP REALTIME CLOCK<br/>TimeDate</div> <div>ENTER</div>   | Select Date to enter the date.                        |
|   | <div>DATE: MONTH, DAY, YEAR<br/>##/##/####</div> <div>ENTER</div> <div>Advance To<br/>SERIAL USAGE</div>                | Enter the date. (Month, Day, Last two digits of Year) |

| Sub-menus                                 | Display                              | Notes   |
|---|--------------------------------------|---|
| 6.3.16<br>SERIAL USAGE<br>(RS-232/485)    | SERIAL USAGE                         | Press Enter to begin setup of the Serial Port.  |
|   | <div>ENTER</div>                     |   |
|   | SERIAL HARDWARE<br>RS232 RS485       | Select Serial Hardware type for standard port.<br>Select RS485 only on special order. (See<br>SETUP NETWORK CARD for RS485 Modbus<br>option)        |
|   | <div>ENTER</div>                     |   |
|   | DEVICE ID<br>##                      | Select the Device ID.   |
|   | <div>ENTER</div>                     |   |
|   | BAUD RATE<br>300 600 1200 <more>     | Select the desired Baud Rate.   |
|   | BAUD RATE<br>2400 4800 9600 19200    | (If <more> selected)  |
|   | <div>ENTER</div>                     |   |
|   | PARITY<br>None Odd Even              | Select the desired Parity.  |
|   | <div>ENTER</div>                     |   |
| 6.3.17<br>SERIAL USAGE<br>(Modem Options) | HANDSHAKING<br>None Software Hardwre | Set the Handshake.  |
|   | <div>ENTER</div>                     |   |
|   | DEVICE LINE FEED<br><CR> <CR+LF>     | Choose end of line termination. Only choose<br><CR> if your external device automatically<br>assigns a line feed for every <CR> carriage<br>return. |
|   | <div>ENTER</div>                     |   |
|   | MODEM OPTIONS<br>No Yes              | Select "Yes" if the serial port will be used to<br>control a modem.   |
|   | <div>ENTER</div>                     |   |
|   | MODEM INIT MASTER<br>No Yes          | Select "Yes" to have the unit engage in a<br>configuration conversation with the modem on<br>power up .   |
|   | <div>ENTER</div>                     |   |
|   | MODEM AUTO ANSWER<br>No Yes          | If "YES" selected for Modem Init Master,<br>choose the desired Modem Auto Answer<br>mode.   |
|   | <div>ENTER</div>                     |   |
|   | CALL OUT DAY OF WEEK<br>1            | Enter the day of the week to perform Call Out<br>transmission. (0 = daily, 1 - 7 = Mon - Sun)   |
|   | <div>ENTER</div>                     |   |
|   | CALL OUT TIME<br>##:##:##            | Enter the time of day to perform Call Out<br>transmission. (HH:MM:SS)   |
|   | <div>ENTER</div>                     |   |

Continued on Next Page

| Sub-menus  | Display  | Notes   |
|--|--|---|
| 6.3.17<br>SERIAL USAGE<br>(Modem Options)<br>(continued) | <div>CALL ON ERROR/ALARM<br/>No Yes</div> <div>ENTER</div>             | Select "Yes" to have the unit perform a Call Out transmission upon error/alarm condition.   |
|  | <div>CALL OUT PHONE # 0</div> <div>ENTER</div>                         | Call Out Phone Number to be dialed for "Call Out Time" or "Print On Error/Alarm". (Up to 20 digits with "." used to pause between digits)                               |
|  | <div>NUMBER OF REDIALS 0</div> <div>ENTER</div>                        | Enter the number of redials to be performed on call out time if busy or no answer (error/ alarm tries until connected).   |
|  | <div>HANGUP IF 2MIN INACT<br/>No Yes</div> <div>ENTER</div>            | Select "Yes" to perform hangup if there is inactivity for more than 2 minutes.  |
|  | Advance To<br>SETUP DATALOG/PRINT                                      |   |
| 6.3.18<br>SETUP<br>DATALOG/PRINT<br>(Configure)          | <div>SETUP DATALOG/PRINT</div> <div>ENTER</div>                        | Press Enter to setup the Datalog/Print information.   |
|  | <div>SETUP DATALOG/PRINT<br/>Config Select_list</div> <div>ENTER</div> | Select Config to configure the Datalog/Print information.   |
|  | <div>OUTPUT FORMAT<br/>Printer Term Dbase</div> <div>ENTER</div>       | Select the type of Output Format.   |
|  | <div>PAGE LENGTH [99 max]<br/>99</div> <div>ENTER</div>                | Enter the desired Page Length.<br>If Printer selected above.  |
|  | <div>TOP MARGIN [99 max]<br/>3</div> <div>ENTER</div>                  | Enter the desired Top Margin.<br>If Printer selected above.   |
|  | <div>DATALOG ONLY<br/>No Yes</div> <div>ENTER</div>                    | Select Yes to record events to the datalogger only. Events will not be sent to the serial port.   |
|  | <div>PRINT TIME HH:MM:SS<br/>00:00:00</div> <div>ENTER</div>           | Enter Print Time, printer will print at this time every day. Enter 00:00:00 to inhibit print time.  |
|  | <div>PRINT INTERVAL<br/>00:00:00</div> <div>ENTER</div>                | Enter Print Interval,<br>Enter 00:00:00 to inhibit print interval..   |
|  | <div>ENABLE PRINT KEY<br/>NO YES</div> <div>ENTER</div>                | Select YES to enable Print Key.<br>Select NO to disable Print Key   |
|  | <div>CLEAR TOTAL IF PRINT<br/>NO YES</div> <div>ENTER</div>            | Select Yes to clear the total after printing. This feature is useful for recording totals, then clearing totals automatically after log or printout has been completed. |
|  | Advance To<br>SETUP DATALOG/PRINT<br>(Select_list)                     |   |


| Sub-menus  | Display  | Notes   |
|--|--|---|
| 6.3.19<br>SETUP<br>DATALOG/PRINT<br>(Select_list)  | <div>SET DATALOG/PRINT</div> <div>ENTER</div> <div>SET DATALOG/PRINT<br/>Config   Select_list</div> <div>PRINT LIST ITEMS<br/>FLUID                   YES</div> <div>PRINT LIST ITEMS<br/>TIME                   YES</div> <div>PRINT LIST ITEMS<br/>TOT1                   YES</div> <div>ENTER</div> <div>PRINT LIST ITEMS<br/>DataLog size =00455</div> <div>ENTER</div> <div>Advance To<br/>ADMINISTRATIVE SETUP</div>   | <p>Press enter to begin Setup Datalog/Print routine.</p> <p>Press enter when Select_list is selected to setup print list.</p> <p>Use Up and Down arrow keys to view list status.</p> <p>Press the Print or function key for the items that you wish to add or remove from the list. Items marked with Yes will be added to the list, items marked with No will be removed from the list.</p> <p>S_ corresponds to Sum</p> <p>The Select Print List Information display shows the current possible Datalog size.</p>   |
| List Items:<br>FLUID<br>TIME<br>TOT1<br>RATES<br>TOT2<br>GRND1<br>TEMP1<br>DENS1<br>PRE1<br>PRE2<br>PRE3<br>PRE4<br>FREQ1<br>FREQ2<br>KA-F<br>KB-F<br>TEMP2<br>DENS2<br>RATE1<br>RATE2<br>TOTS<br>GRND2<br>GRNDS |  |   |
| 6.3.20<br>ADMINISTRATIVE<br>SETUP  | <div>ADMINISTRATIVE SETUP</div> <div>ENTER</div> <div>TAG NUMBER<br/>FT XXXX</div> <div>ENTER</div> <div>OPERATOR PASSWORD<br/>*****</div> <div>ENTER</div> <div>SUPERVISOR PASSWORD<br/>*****</div> <div>ENTER</div> <div>SOFTWARE VERSION<br/>Vxxx.xx</div> <div>ENTER</div> <div>PRODUCT ORDER CODE<br/>ST1SUMFCxxxxxxxx</div> <div>ENTER</div> <div>UNIT SERIAL NUMBER<br/>00000</div> <div>ENTER</div> <div>SENSOR SERIAL NUMBER<br/>00000</div> <div>ENTER</div> <div>DISPLAY NEW ERR ONLY<br/>No                   Yes</div> <div>ENTER</div> <div>Advance To<br/>INSTRUMENT TYPE</div> | <p>Press Enter to begin Administrative Setup.</p> <p>Use the up and down arrow keys to define tag number.</p> <p>Enter Operator Password. (Factory Set to 0)</p> <p>Enter Supervisor Password, if logged in as supervisor. (Factory Set to 2000)</p> <p>This display is used to show the software version of the installed software.</p> <p>This display is used to show the product order code (model number).</p> <p>This display is used to show the unit's serial number.</p> <p>This display is used to show the sensor's serial number.</p> <p>If yes is selected, an error message will only appear once until acknowledged by user.</p> <p>Advance to Network Card only if a Network Card is installed.</p> |



6.3.21  
SETUP  
NETWORK CARD  
(optional)

SETUP NETWORK CARD

Press Enter to setup Network Card



SELECT NTW PROTOCOL  
ModbusRTU

Select desired Network Protocol.



NETWORK DEVICE ID  
1

Enter the device address on network (00-255).



BAUD RATE  
2400 4800 9600 19200

Select the desired Baud Rate.



PARITY  
None Odd Even

Select the desired Parity.



Advance To  
INSTRUMENT TYPE

## 7. Principle Of Operation

### General Operation

#### 7.1 General:

The ST1-SUM-FC Flow Computer uses several internal calculations to compute the Sum compensated flow based on specific data input. Several computations are performed to arrive at the uncompensated flow, Flow1 and Flow2 temperatures, density and viscosity. This information is then used to compute the Corrected Volume Flow or Mass Flow.

#### Note concerning Fluid Information

The user will be prompted for Fluid Information during the setup of the instrument. The unit can store the fluid properties for up to 10 different fluids at one time. See also Appendix A for common fluid properties for liquids.

### Flow Equations

#### 7.2 Flow Equations:

#### Input Temperature Computation:

##### General Case

$$Tf1 = [\% \text{ input span} \cdot (\text{temp FS} - \text{Temp low scale})] + \text{temp low scale}$$

$$Tf2 = [\% \text{ input span} \cdot (\text{temp FS} - \text{Temp low scale})] + \text{temp low scale}$$

#### Fluid Properties:

##### Liquid Generic Case

$$\text{liquid density1} = \text{reference density} \cdot (1 - (\text{Therm. Exp. Coef.} \times 10^{-6} (Tf - Tref))^2)$$

$$\text{liquid density2} = \text{reference density} \cdot (1 - (\text{Therm. Exp. Coef.} \times 10^{-6} (Tf - Tref))^2)$$

##### Liquid API Case

$$\text{liquid density1} = \text{reference density} \cdot (\text{VCF API2540})$$

$$\text{liquid density2} = \text{reference density} \cdot (\text{VCF API2540})$$

#### Where:

Tf1 = Flow1 Temperature via AUX 1  
Tf2 = Flow2 Temperature via AUX 2  
**NOTE:** If AUX2 Usage = AUX1; TF2 = TF1

Liquid Density1 = Computed density at Flow1 Temperature from AUX1  
Liquid Density2 = Computed density at Flow2 Temperature from AUX2  
**NOTE:** If AUX2 Usage = AUX1; Liquid Density2 = Liquid Density1

**NOTE:** If both AUX1 and AUX2 Usage = NONE: TF2 = TF1 = Default Temperature

7.2 Flow Equations: (Continued)

Fluid Equations

Viscosity Computation:

*Liquid Case*

$$\begin{aligned} \uparrow \text{ centistokes1} &= \left( A \exp \frac{B}{(\text{Deg F} + 459.67)} \right) \\ \uparrow \text{ centistokes2} &= \left( A \exp \frac{B}{(\text{Deg F} + 459.67)} \right) \end{aligned}$$

**Where:** centistokes = cP/(kg/l)  
centistokes1 = computed viscosity in Flow1  
centistokes2 = computed viscosity in Flow2

Uncompensated Flow Computation:

*Pulse Input; Average K-Factor*

$$\text{Volume Flow1, 2} = \frac{\text{input frequency} \cdot \text{time scale factor}}{\text{K-Factor}}$$

*Pulse Input; Linear Table*

$$\text{Volume Flow1, 2} = \frac{\text{input frequency} \cdot \text{time scale factor}}{\text{K-Factor (Hz)}}$$

*Pulse Input; UVC Table*

$$\text{Volume Flow1, 2} = \frac{\text{input frequency} \cdot \text{time scale factor}}{\text{K-Factor (Hz/cstk)}}$$

*Pulse Input; Strouhal/Roshko Table*

$$\begin{aligned} \text{Volume Flow1, 2} &= \frac{\text{input frequency} \cdot \text{time scale factor}}{\text{Strouhal Cal} / (1 + 3 \cdot \text{meter exp coeff.} \cdot 10^{-6} (\text{Tf-Tcal}))} \\ \text{Roshko Cal1, 2} &= \frac{\text{input frequency} \cdot (1 + 2 \cdot \text{meter exp coeff.} \cdot 10^{-6} (\text{Tf-Tcal}))}{\text{cstk}} \end{aligned}$$

Corrected Volume Flow Computation:

*Liquid Case*

*Generic Case*

$$\text{Standard Volume Flow} = \text{volume flow} \cdot (1 - \text{Therm.Exp.Coeff.} \cdot (\text{Tf-Tref}))^2$$

*API Case*

$$\text{Standard Volume Flow} = \text{volume flow} \cdot (\text{UCF API2540})$$

Mass Flow Computation:

$$\text{Mass Flow} = \text{volume flow} \cdot \text{density}$$

Sum Flow Computation:

$$\text{Sum Flow} = \text{Flow 1} + \text{Flow 2}$$

7.2 Flow Equations: (Continued)

Flow Equations

**API 2540 Equation.** The American Petroleum Institute, in a joint program with the National Bureau of Standards (NIST), developed a density equation based on 463 samples of five different oil products. The results of this work are incorporated into Chap. 11.1, “Volume Correction Factors,” of API Standard 2540 (1987).  
The density equation is based on the thermal-expansion coefficient of the product at 60°F (15.6°C) base temperature, which is calculated from the base density as

$$\alpha_b = \frac{K_0}{\rho_b^{*2}} + \frac{K_1}{\rho_b^*} \tag{2.188}$$

where the base density  $\rho_b^*$  is in kilograms per cubic meter. The empirically derived constants  $K_0$  and  $K_1$  for the five product groups are given in Table 2.23. The density of the product at flowing temperature is then calculated as

$$\rho_F^* = \rho_b^* \exp [-\alpha_b \Delta T_F (1 + 0.8 \alpha_b \Delta T_F)] \tag{2.189}$$

where  $\Delta T_F = T_F - 60$ . The specific gravity at flowing or measured temperature is then

TABLE 2.23 Constants  $K_0$  and  $K_1$  for Five Product Groups

| Product group                       | $K_0$    | $K_1$  |
|-------------------------------------|----------|--------|
| Crude oils and JP4†                 | 341.0957 | 0.0    |
| Jet fuels, kerosenes, solvents      | 330.3010 | 0.0    |
| Gasolines and naphthenes            | 192.4571 | 0.2438 |
| Lubricating oils                    | 144.0427 | 0.1895 |
| Diesel oil, heating oils, fuel oils | 103.8720 | 0.2701 |

*Note:* Pentanes and hydrocarbons lower in the hydrocarbon chain are *not* covered by this data.  
†API News Release 1987 added JP4.

The above information was obtained from "Flow Measurement Engineering Handbook, 3rd Edition" by Richard W Miller.

API 2540  
Expansion Factor  
Equation

1. Select the values for  $K_0$  and  $K_1$  for the fluid group to be measured
2. Convert the base reference density for your fluid into the corresponding density units of kg/m<sup>3</sup>
3. Solve for  $\alpha_b$  using equation above
4.  $C = \alpha_b \cdot 1,000,000$

### 7.3 Calculating the Fluid Expansion Factor for Generic Case

**Calculating  
Expansion Factor**

The liquid density is a function of the flowing temperature for many fluids. This unit solves an equation which represents this physical property of the fluid. The information which the unit uses to describe the fluid is entered by the user in the following variables: Reference Temperature, Reference Density, Fluid Expansion Factor. Values for common fluids are listed in Appendix A for the generic case. This information is available for many fluids in one or more of the following forms:

- Fluid Specific Gravity vs. Temp. Table
- Specific Gravity vs. Temp. Graph
- Fluid Density vs. Temp. Table
- Fluid Density vs. Temp. Graph

Begin by obtaining one of the fluid properties for the fluid you are using from available manufacturers information or Engineering Handbooks. In some cases this information is listed on the Material Safety Data Sheet for the fluid. Two temperature-specific gravity pairs will be required to compute the temperature coefficient. The reference temperature is simply chosen by the user. Common reference temperatures are 60° F or 15° C. The reference temperature should be chosen so that it is in the application temperature range. i.e. application temperature range -10 to 120° F, reference temperature of 60° F chosen. Enter the reference temperature you have chosen at this point. The reference specific gravity corresponds to the fluid SPECIFIC GRAVITY at the reference temperature chosen. You may convert the fluid density information to specific gravity if it is in units other than specific gravity. Use EQ1.

**Expansion Factor  
Equations**

EQ1.

$$\text{Spec.Grav.} = \text{Density of Fluid} / \text{Density of Water}$$

Given the reference temperature, reference specific gravity, a second temp. and a second Spec.Grav., the Expansion Factor (C Factor) can be computed as follows:

EQ2. Used for Liquid Mass and Corrected Volume Equations

$$C = \left[ \frac{1 - \sqrt{(\text{Spec.Grav.2} / \text{Ref.Spec.Grav.})}}{\text{Temp.2} - \text{Ref.Temp}} \right] \times 1,000,000$$

Given the reference temperature, reference density, a second temp. and a second density, the Expansion Factor (C Factor) can be computed as follows:

EQ3. Used for Liquid Mass and Corrected Volume Equations

$$C = \left[ \frac{1 - \sqrt{(\text{Dens.2} / \text{Ref.Dens.})}}{\text{Temp.2} - \text{Ref.Temp}} \right] \times 1,000,000$$

**C = Fluid Expansion Factor**

### 7.4 Computation of Viscosity Coef. A and B

**Computation of Viscosity Coef. A & B**

The flow computer solves a generic equation which computes the viscosity in cstk as a function of temperature. Two parameters must be entered for this calculation to be performed. These are the setup parameters Viscosity Coef. A and Viscosity Coef. B. A table listing these values for common fluids is available in Appendix A.

Alternately, if your intended fluid is not listed, the Viscosity Coef. A and B can be derived from two known temperature/viscosity pairs. Begin by obtaining this information for you intended fluid. Convert these known points to units of Degrees F and centistoke (cstk)

The information is now in a suitable form to compute the Viscosity Coef. A and Viscosity Coef. B using the following equation based on the fluid state.

For a liquid, A and B are computed as follows:

$$B = \frac{(T1 + 459.67) \cdot (T2 + 459.67) \cdot \ln [ \text{cstk1}/\text{cstk2} ]}{(T2 + 459.67) - (T1 + 459.67)}$$

$$A = \frac{\text{cstk1}}{\exp [ B / ( T1 + 459.67 ) ]}$$

**NOTE:**  $\text{cS} = \frac{\text{cP} \cdot \text{Density of Water at } 4^{\circ}\text{C}}{\text{Density of Fluid at Flowing Conditions}}$



7.5 Linearization Table

Linearization  
Table  
General  
Information

7.5.1 Linearization Table General Information

The Linearization Table is used when the flow input device gives a nonlinear input signal. The unit uses up to 40 different points, as entered by the operator, to form a curve for linearizing the input signal.

Notes:

- 1) A minimum of three points must be set up.
- 2) If "0" is entered for the frequency of any point other than point 1, the Flow Computer assumes there are no more points above the points that preceded them. The display will advance to the next setup prompt.
- 3) If the input frequency is above the highest or below the lowest frequency programmed, the unit will use the last known point for the K factor in computing the resulting actual flow.
- 4) Frequencies, Hz/Cstks or Roshko numbers should be entered in ascending order.

Linearization  
Table  
(Pulse Inputs)

7.5.2 Linearization Table for Pulse Inputs

The linearization table for pulse inputs programming is quite simple when values of frequency and K factors are known. The Flow Computer asks for 40 different frequencies (Freq) and 40 corresponding K factors (K). It then uses this data to determine what the actual volume flow rate is for any given input frequency on the respective flowmeter. Usually the necessary data is provided with the flowmeter.

Linearization  
Table  
Interpolation

7.5.3 Linearization Table Interpolation

The Linearization Table routine uses the entered data to determine the K factor for any given input frequency or input flow signal. This is done by taking the closest data points above and below the input signal, then using those points to interpolate the K factor, then calculating the uncompensated volume flow from the data. Below are the formulas.

Parameters:


Determine closest point above input signal  
signal = X, K factor (correction factor) = KA

Determine closest point below input signal  
signal = Y, K factor (correction factor) = KB

Let input signal = H,  
unknown K factor (correction factor) = KN

To find KN use this formula:

$$\frac{H - Y}{X - Y} \times (KA - KB) + KB = KN$$

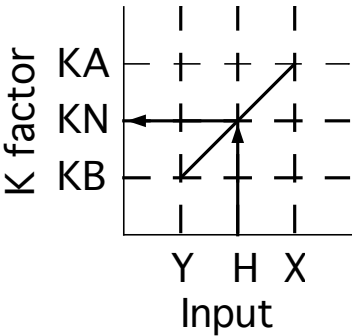

Universal  
Viscosity Curve

7.6 Universal Viscosity Curve (UVC)

A Universal Viscosity Curve is a presentation of the calibration of a turbine flowmeter's K-Factor as a function of the Hz/cstks. It is used to represent the combined effects of flowrate and viscosity on the calibration of the flowmeter. It is entered as a table of point pairs in ascending order of Hz/cstks.

Strouhal Roshko  
Curve

7.7 Strouhal Roshko Curve (StRo)

A Strouhal Roshko Curve is a presentation of the calibration of a turbine flowmeter's calibration as a table or curve of Strouhal number as a function of Roshko number. It is used to represent the combined effects of flowrate, flowing temperature and viscosity on the calibration of the turbine flowmeter. It is entered as a table of point pairs in ascending order of Roshko numbers.

8. Test, Service and Maintenance

8.1 Test Menus

| Menus                            | Display  | Notes   |
|----------------------------------|--|---|
| 8.1.1<br>TOP LEVEL<br>TEST MENUS | <div>SELECT OPERATE STATE</div> <div>Run   Setup   <b>Test</b></div> <div>ENTER</div> <div>START</div> <div>Audit Trail</div> <div>STOP   START</div> <div>Error history</div> <div>STOP   START</div> <div>Print System Setup</div> <div>STOP   START</div> <div>Keypad Test</div> <div>STOP   START</div> <div>Display test</div> <div>STOP   START</div> <div>Calibrate</div> <div>STOP   START</div> <div>Analog In Test</div> <div>STOP   START</div> <div>Pulse input test</div> <div>STOP   START</div> <div>Analog out test</div> <div>STOP   START</div> <div>Excitation out test</div> <div>STOP   START</div> <div>Pulse out test</div> <div>STOP   START</div> <div>Relay Test</div> <div>STOP   START</div> <div>Control inputs test</div> <div>STOP   START</div> <div>Battery Voltage Test</div> <div>STOP   START</div> <div>STOP</div> <div>Data logger utility</div> | <p>Select Test to enter the instrument test &amp; calibration routine.</p> <p><b>NOTE:</b> Supervisor (Service) password required to gain access to this mode.</p> <p>Refer to Page 40 for Details.</p> <p>Refer to Page 40 for Details.</p> <p>Refer to Page 40 for Details.</p> <p>Refer to Page 41 Details.</p> <p>Refer to Page 41 for Details.</p> <p>Refer to Pages 42-46 for Details.</p> <p>Refer to Page 46 Details.</p> <p>Refer to Page 47 for Details.</p> <p>Refer to Page 47 for Details.</p> <p>Refer to Page 47 for Details.</p> <p>Refer to Page 48 for Details.</p> <p>Refer to Page 48 for Details.</p> <p>Refer to Page 48 for Details.</p> <p>Refer to Page 49 for Details.</p> <p>Refer to Page 49 for Details.</p> |

8.2 Test Sub-Menus

| Sub-menus                                    | Display  | Notes  |
|--|--|--|
| 8.2.1<br>Audit Trail<br>Submenu Group        | Audit Trail                                      | Press Enter to view the audit trail information.   |
|  | <div>ENTER</div>                                 |  |
|  | Config_Audit    nnnnn<br>hh:mm:ss       dd/mm/yy | The configuration audit trail format:<br>nnnnn= number of critical menu changes,<br>hh:mm:ss; mm/dd/yy = time and date of last change. |
|  | <div>ENTER</div>                                 |  |
|  | Cal_Audit       nnnnn<br>hh:mm:ss       dd/mm/yy | The calibration audit trail format:<br>nnnnn= number of calibration changes,<br>hh:mm:ss; dd/mm/yy = time and date of last change.     |
|  | <div>MENU</div>                                  |  |
|  | Audit Trail                                      | Press Menu to get back to audit trail top-level menu.  |
|  |  |  |
| 8.2.2<br>Error History<br>Submenu Group      | Error history                                    | Press Enter to view error history.   |
|  | <div>ENTER</div>                                 | <b>NOTE:</b> Press Print Key to print Error History. Printout will include time/date of each errors first occurrence.                  |
|  | Error history<br>Flow rate alarm low             | Press Up/Down arrow keys to scroll through all error message history. Press CLEAR to clear entire error log.                           |
|  | <div>MENU</div>                                  |  |
|  | Error history                                    | Press Menu to get back to error history top-level menu.  |
|  |  |  |
|  |  |  |
|  |  |  |
| 8.2.3<br>Print System Setup<br>Submenu Group | Print System Setup                               | Press enter key to enter print system setup submenu  |
|  | <div>ENTER</div>                                 |  |
|  | Print System Setup<br>Press ENTER to print       | Press enter to begin printing the system setup.  |
|  | <div>ENTER</div>                                 |  |
|  | Print System Setup<br>-- Printing ---            | This message will display as the data transmission takes place.  |
|  | <div>MENU</div>                                  |  |
|  | Print System Setup                               | Press Menu to get back to print system setup top-level menu.   |
|  |  |  |

Sub-menus


Display

Notes

8.2.4  
Keypad test  
Submenu Group


Keypad test

ENTER



Keypad test  
Key pressed-> ENT

MENU



Keypad test

Press Enter to enter keypad test


Press the various keys and the display will show the key that was pressed. Press Menu to exit the test

Press Menu to get back to Keypad test top-level menu.

8.2.5  
Display test  
Submenu Group


Display test

ENTER



00000000000000000000  
00000000000000000000

MENU



Display test

Press Enter to enter display test.










Upon pressing enter, each digit on the display will scroll 0-9 then A-Z. Press menu to exit the test.





Press Menu to get back to Display test top-level menu.

**ALL UNITS ARE CALIBRATED AT THE FACTORY PRIOR TO SHIPMENT**





**CAUTION:**  
This unit must be calibrated using precision and calibrated equipment.







Equipment needed is as follows: Frequency Generator, Digital Multimeter, Precision Current/Voltage Source, Oscilloscope, Frequency Counter.









| Sub-menus                                | Display   | Notes  |
|--|---|--|
| Calibration Submenu Group                | <div>Calibrate</div> <div></div>   | Press Enter to begin the calibration routine. (Please note the caution above)  |
| 8.2.6 Calibrate Aux1: 0mA Submenu Group  | <div>Calibrate Aux1: 0mA<br/>Iin=TB1-7 GND=TB1-4</div> <div></div> <div>Calibrate Aux1: 0mA<br/>CALIBRATING --</div> <div></div> <div>Calibrate Aux1: 0mA<br/>*** DONE ***</div> <div></div> <div>Calibrate Aux1: 0mA<br/>Iin=TB1-7 GND=TB1-4</div> <div></div>  | <p>Connect Current Source (+) TB1-7, (-) TB1-4. Input 0mA and press Enter.</p> <p>This message is displayed during calibration.</p> <p>This message is displayed when the 0mA calibration is finished.</p> <p>The display will automatically return to the Calibrate Aux1 0mA submenu. Press the Down arrow key to advance to the Aux1 20mA calibration.</p>   |
| 8.2.7 Calibrate Aux1: 20mA Submenu Group | <div>Calibrate Aux1: 20mA<br/>Iin=TB1-7 GND=TB1-4</div> <div></div> <div>Calibrate Aux1: 20mA<br/>0 CALIBRATING --</div> <div></div> <div>Calibrate Aux1: 20mA<br/>*** DONE ***</div> <div></div> <div>Calibrate Aux1: 20mA<br/>Iin=TB1-7 GND=TB1-4</div> <div></div> <div>Advance to<br/>Calibrate Aux2: 0mA</div> | <p>Connect Current Source (+) TB1-7, (-) TB1-4. Input 20mA and press Enter.</p> <p>This message is displayed during calibration.</p> <p>This message is displayed when the 20mA calibration is finished.</p> <p>The display will automatically return to the Calibrate Aux1 20mA submenu. Press the Down arrow key to advance to the Aux2 0mA calibration.</p> |

| Sub-menus                                      | Display  | Notes   |
|--|--|---|
| 8.2.8<br>Calibrate Aux2: 0mA<br>Submenu Group  | Calibrate Aux2: 0mA<br>Iin=TB1-8 GND=TB1-4<br>    | To Calibrate: Connect Current Source (+) TB1-8, (-) TB1-4. Input 0mA and press Enter.   |
|  | Calibrate Aux2: 0mA<br>0 CALIBRATING --  | This message is displayed during calibration.   |
|  | Calibrate Aux2: 0mA<br>*** DONE ***  | This message is displayed when the 0mA calibration is finished.   |
|  | Calibrate Aux2: 0mA<br>Iin=TB1-8 GND=TB1-4<br>    | The display will automatically return to the Calibrate Aux2 0mA submenu. Press the Down arrow key to advance to the AUX2 20mA calibration.      |
| 8.2.9<br>Calibrate Aux2: 20mA<br>Submenu Group | Calibrate Aux2: 20mA<br>Iin=TB1-8 GND=TB1-4<br>  | To Calibrate: Connect Current Source (+) TB1-8, (-) TB1-4. Input 20mA and press Enter.  |
|  | Calibrate Aux2: 20mA<br>0 CALIBRATING --   | This message is displayed during calibration.   |
|  | Calibrate Aux2: 20mA<br>*** DONE ***   | This message is displayed when the 20mA calibration is finished.  |
|  | Calibrate Aux2: 20mA<br>Iin=TB1-8 GND=TB1-4<br> | The display will automatically return to the Calibrate Aux2 20mA submenu. Press the Down arrow key to advance to the calibrate 0mA output menu. |
|  | Advance to<br>Cal Therm: 100 Ohms  |   |



| Sub-menus                                      | Display  | Notes  |
|--|--|--|
| 8.2.10<br>Cal Therm: 100 Ohms<br>Submenu Group | Cal Therm: 100 Ohms<br>Therm TB1-6 to TB1-4<br> | To Calibrate: Place a 100 ohm 0.1% resistor between TB1-6 and TB1-4. Press enter to calibrate.   |
|  | Cal Therm: 100 Ohms<br>0 CALIBRATING --  | This message is displayed during calibration.  |
|  | Cal Therm: 100 Ohms<br>*** DONE ***  | This message is displayed when the calibration is finished.  |
|  | Cal Therm: 100 Ohms<br>Therm TB1-6 to TB1-4<br> | The display will automatically return to the Cal Therm: 100 Ohms top-level menu. Press the Down arrow key to advance to the Thermistor Open calibration. |
|  | Advance to<br>Cal Therm: Open  |  |
| 8.2.11<br>Cal Therm: Open<br>Submenu Group     | Cal Therm: Open<br>Therm TB1-6 to TB1-4<br>   | To Calibrate: Remove the 100Ω 0.1% resistor from TB1-6 and TB1-4 and leave open. Press enter to calibrate.   |
|  | Cal Therm: Open<br>0 CALIBRATING --  | This message is displayed during calibration.  |
|  | Cal Therm: Open<br>*** DONE ***  | This message is displayed when the calibration is finished.  |
|  | Cal Therm: Open<br>Therm TB1-6 to TB1-4<br>   | The display will automatically return to the Cal Therm Open top-level menu. Press the Down arrow key to advance to the Aux2: 0V calibration.             |
|  | Advance to<br>Calibrate Aux2: 0V   |  |

| Sub-menus  | Display   | Notes   |
|--|---|---|
| 8.2.12<br>Calibrate Aux2: 0V<br>Submenu Group    | Calibrate Aux2: 0V<br>Vin=TB1-5 GND=TB1-4<br>    | To Calibrate: Connect Voltage Source (+) TB1-5, (-) TB1-4. Input 0V and press Enter.  |
|  | Calibrate Aux2: 0V<br>0 CALIBRATING --  | This message is displayed during calibration.   |
|  | Calibrate Aux2: 0V<br>*** DONE ***  | This message is displayed when the 0V calibration is finished.  |
|  | Calibrate Aux2: 0V<br>Iin=TB1-5 GND=TB1-4<br>    | The display will automatically return to the Calibrate Aux2 0V top-level menu. Press the Down arrow key to advance to the Aux2 10V calibration.           |
| 8.2.13<br>Calibrate Aux2: 10V<br>Submenu Group   | Calibrate Aux2: 10V<br>Iin=TB1-5 GND=TB1-4<br>  | To Calibrate: Connect Voltage Source (+) TB1-5, (-) TB1-4. Input 10V and press Enter.   |
|  | Calibrate Aux2: 10V<br>0 CALIBRATING --   | This message is displayed during calibration.   |
|  | Calibrate Aux2: 10V<br>*** DONE ***   | This message is displayed when the 10V calibration is finished.   |
|  | Calibrate Aux2: 10V<br>Iin=TB1-5 GND=TB1-4<br> | The display will automatically return to the Calibrate Aux2 10V top-level menu. Press the Down arrow key to advance to the 100 ohm RTD calibration.       |
| Advance to<br>Cal RTD 100ohm                     |   |   |
| 8.2.14<br>Calibrate 100 ohm RTD<br>Submenu Group | Cal RTD 100ohm<br>JMP TB1-6,7 100R=7,8<br>     | To Calibrate: Connect a jumper wire between TB1-6 and TB1-7, Place a 100 ohm 0.1% resistor between TB1-7 and TB1-8. Press enter to calibrate.             |
|  | Cal RTD 100ohm<br>0 CALIBRATING --  | This message is displayed during calibration.   |
|  | Cal RTD 100ohm<br>*** DONE ***  | This message is displayed when the RTD calibration is finished.   |
|  | Cal RTD 100ohm<br>JMP TB1-6,7 100R=7,8<br>     | The display will automatically return to the Calibrate 100 ohm RTD top-level menu. Press the Down arrow key to advance to the 0mA analog out calibration. |
| Advance to<br>Calibrate 0mA Aout                 |   |   |

| Sub-menus                                      | Display   | Notes   |
|--|---|---|
| 8.2.15<br>Calibrate 0mA Aout<br>Submenu Group  | Calibrate 0mA Aout<br>+ TB1-15 - TB1-16   | Connect ammeter to (+) TB1-15, (-) TB1-16.<br>Press enter.  |
|  |    | To trim 0mA analog output: Press CLEAR to enable editing and enter a small negative number (i.e. -0.100) to force a display reading, then clear and enter small quantity measured on your meter.                        |
|  | Calibrate 0mA Aout<br>Enter mA: 0.00000   | The display will return to Calibrate 0mA out.<br>Press the down arrow key to advance to the 20mA analog out or repeat above if necessary.   |
| 8.2.16<br>Calibrate 20mA Aout<br>Submenu Group |    |   |
|  | Calibrate 20mA Aout<br>+ TB1-15 - TB1-16  | Connect ammeter to (+) TB1-15, (-) TB1-16.<br>Press enter.  |
|  |    |   |
|  | Calibrate 20mA out<br>Enter mA: 20.00000  | To trim 20mA analog output: Press CLEAR to enable editing and enter the current reading that is on the ammeter display. Press enter.  |
|  |    |   |
| 8.2.17<br>Analog In Test<br>Submenu Group      | Calibrate 20mA Aout<br>+ TB1-15 - TB1-16  | The display will automatically return to the Calibrate 20mA Aout submenu. Calibration is complete.  |
|  |  |   |
|  | Calibrate   | Press the Menu key to go back to Calibrate top-level menu.  |
|  |  |   |
| 8.2.17<br>Analog In Test<br>Submenu Group      | Calibrate   |   |
|  | Analog In Test  | Press enter to test the analog inputs.  |
|  |  |   |
| 8.2.17<br>Analog In Test<br>Submenu Group      | Analog In Test mA<br>T7:00.000 T8:00.000  | To check current input accuracy: Use TB1-4 as Reference Ground, input 0-20mA to TB1-7 and/or TB1-8. Display should show current being input. Use ammeter to verify input. Use Up/Down arrow keys to check other inputs. |
|  |  |   |
|  | Analog In Test  | Press Menu key to return to Analog In Test top-level menu.  |

**NOTE:**  
Press the  $\Delta \nabla$  keys for additional analog input tests for RTD, Thermistor, and Voltage on terminal 5. Connect only one signal type at a time based on the Analog Input test being performed.

Sub-menus

Display

Notes

8.2.18  
Pulse input test  
Submenu Group

Pulse input test

ENTER

2.5V  
10mV  
100mV

START

STOP

Pulse input test  
Trigger level 2.5V

ENTER

40Hz  
3KHz  
20kHz

START

STOP

Pulse input test  
count speed 3kHz

ENTER

Pulse input test  
F1: 0 F2: 0

MENU

Pulse input test

Press Enter key to test the pulse input.

Use the Up/Down arrow keys to select the appropriate trigger level.

Use the Up/Down arrow keys to select the appropriate frequency range.

To check Pulse input accuracy at the above settings: Use TB1-4 as reference ground, input a frequency on TB1-2 and/or TB1-3. The display should show frequency being input. Use a frequency counter to verify input.

Press Menu key to return to Pulse input test top-level menu.

8.2.19  
Analog out test  
Submenu Group

Analog out test

ENTER

Analog out test  
\*0 4 10 15 20 mA

MENU

Analog out test

Press Enter to test the analog output.

To simulate analog output: Connect an ammeter to (+) TB1-15, (-) TB1-16. Press the key under the desired setting to move the asterisk (\*). The unit should output the selected current.

Press Menu key to return to Analog out test top-level menu.

8.2.20  
Excitation out test  
Submenu Group

Excitation out test

ENTER

Excitation out test  
\*5v 12v 24v







MENU






Excitation out test

Press Enter to test the excitation output.

To test the excitation output: Connect a voltmeter to (+) TB1-1, (-) TB1-4. Press the key under the desired setting to move the asterisk (\*). The unit should output the selected voltage.

Press Menu key to return to Excitation out test top-level menu.

| Sub-menus                                     | Display  | Notes  |
|---|--|--|
| 8.2.21<br>Pulse out test<br>Submenu Group     | <div>Pulse out test</div> <div></div> <div>Pulse out test<br/>*0Hz 1Hz 10Hz 20Hz</div> <div></div> <div>Pulse out test</div>             | <p>Press Enter key to test the pulse output.</p> <p>To simulate a frequency on the pulse output: Connect a frequency counter to (+)TB1-13, (-)TB1-14. Press the key under the desired setting to move the asterisk (*). The unit should output the selected frequency.</p> <p>Press Menu key to return to Pulse out test top-level menu.</p> |
| 8.2.22<br>Relay test<br>Submenu Group         | <div>Relay Test</div> <div></div> <div>R1y1 R1y2 R1y3 R1y4<br/>Off Off Off Off</div> <div></div> <div>Relay Test</div>                 | <p>Press Enter to test the relays.</p> <p>To manually control the relay outputs: Press the key under the desired relay to toggle the relays On/Off. Use an ohmmeter to check the relay contacts.</p> <p>Press Menu key to return to Relay Test top-level menu.</p>   |
| 8.2.23<br>Control input test<br>Submenu Group | <div>Control inputs test</div> <div></div> <div>TB1-9 TB1-10 TB1-11<br/>Off Off Off</div> <div></div> <div>Control inputs test</div> | <p>Press Enter to test the control inputs.</p> <p>To check the control inputs: Use TB1-12 as reference, input a positive 3-30 VDC signal to TB1-9, TB1-10 and/or TB1-11, The Display will show ON when input is active, OFF when inactive.</p> <p>Press Menu key to return to control input test top-level menu.</p>                         |

| Sub-menus  | Display   | Notes   |
|--|---|---|
| 8.2.24<br>Battery Voltage<br>test<br>Submenu Group | <div>Battery Voltage Test</div> <div></div>                              | Press Enter key to view the battery voltage.  |
|  | <div>Battery Voltage Test<br/>3.312 Volts</div> <div></div>              | The display will show the battery voltage.<br>Replace battery at 2.5 VDC or below.                                |
|  | <div>Battery Voltage Test</div>   | Press Menu key to return to battery voltage test top-level menu.  |
| 8.2.25<br>Data logger utility<br>Submenu Group     | <div>Data logger utility</div> <div></div>                               | Press Enter to use data logger utility.   |
|  | <div>Data logger utility<br/>Log 10        958 Max</div> <div></div>   | The displays shows the number of Data Logs.<br>Press the Down arrow key to advance to PRT (print) or CLR (clear). |
|  | <div>Data logger utility<br/>Log 00001       PRT CLR</div> <div></div> | Press F3 PRINT key to output data logger logs to printer, Press CLEAR key to clear the data logger contents.      |
|  | <div>Data logger utility</div>  | Press Menu key to return to Data logger utility top-level menu.   |



### 8.3 Internal Fuse Replacement

**Instructions:**

1. Make sure you follow proper E.S.D. Precautions. All persons performing this replacement must follow proper grounding procedures.
2. Turn the power to the unit off.
3. Disconnect the two piece connector rear terminal block, leaving all connections in place.
4. Remove the unit from the panel.
5. Remove the four machine screws (see fig. 1) which hold the two sections of the case together.
6. The rear section of the case should detach from the rest of the case. It may be necessary two cut the wiring label along the joint where the two sections connect. With the rear section of the case removed the fuse will be exposed (located near the rear terminal, AC connection).
7. Locate the Fuse F1 (see fig. 2) and unplug the fuse from its socket.
8. Insert the new fuse into the socket. Insure that the pins are fully inserted and straight.
9. Reassemble the case and install the four machine screws which join the two sections of the case.
10. Reinstall the unit into the panel.
11. Reconnect the rear terminal block.
12. Turn the unit back on.

**Fuse Specifications:**

- |                  |                |                                   |
|------------------|----------------|-----------------------------------|
| 110 VAC Power:   | 160mA/250V, TD | Wickman 19372-030-k or equivalent |
| 220 VAC Power:   | 80mA/250V, TD  | Wickman 19372-026-k or equivalent |
| 12/24 VDC Power: | 800mA/250V, TD | Wickman 19374-046-k or equivalent |

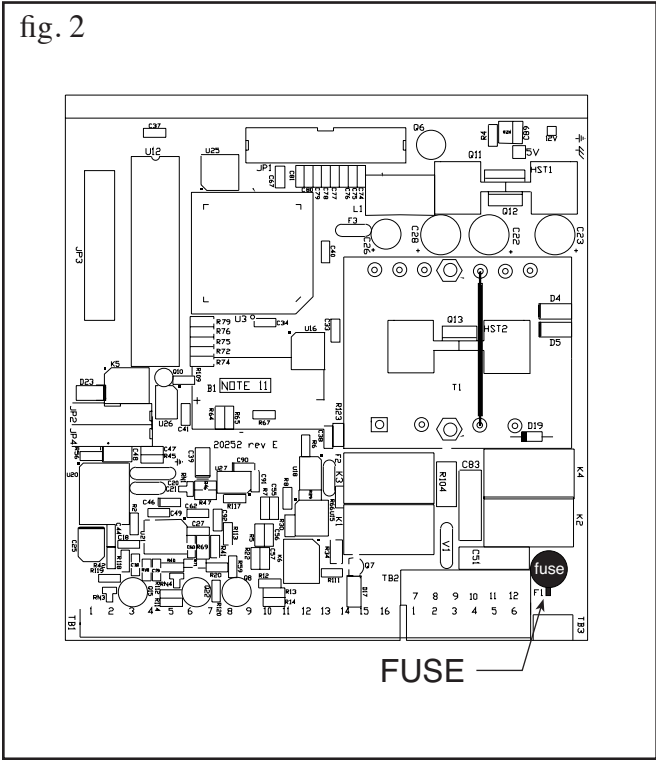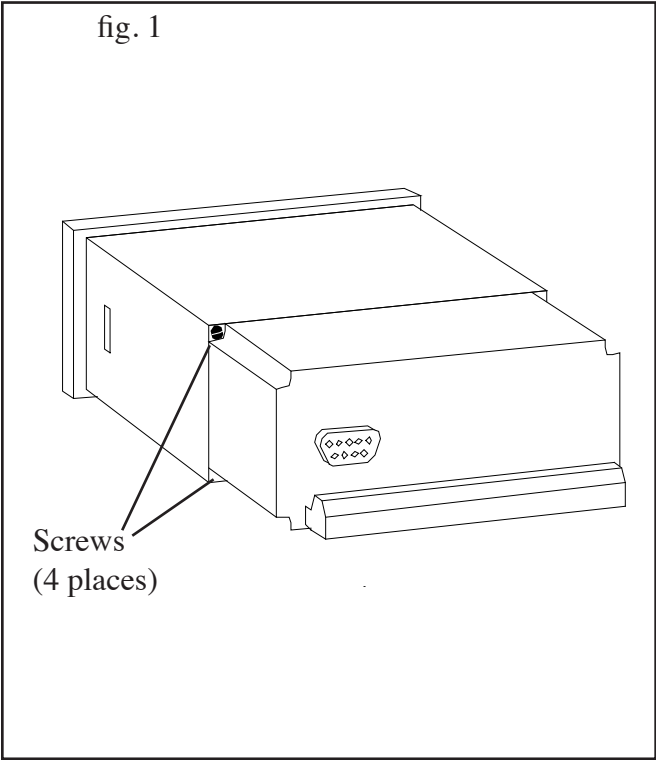



## 9. RS-232 Serial Port

### 9.1 RS-232 Port Description:

The ST1-SUM-FC has a general purpose RS-232 Port which may be used for any one of the following purposes:

- Transaction Printing
- Data Logging
- Remote Metering by Modem (optional)
- Computer Communication Link
- Configuration by Computer
- Print System Setup
- Print Calibration/Malfunction History

### 9.2 Instrument Setup by PC's over Serial Port

A Diskette program is provided with the ST1-SUM-FC that enables the user to rapidly configure the ST1-SUM-FC using a Personal Computer. Included on the diskette are common instrument applications which may be used as a starting point for your application. This permits the user to have an excellent starting point and helps speed the user through the instrument setup.

### 9.3 Operation of Serial Communication Port with Printers


ST1-SUM-FC's RS-232 channel supports a number of operating modes. One of these modes is intended to support operation with a printer in metering applications requiring transaction printing, data logging and/or printing of calibration and maintenance reports.

For transaction printing, the user defines the items to be included in the printed document. The user can also select what initiates the transaction print generated as part of the setup of the instrument. The transaction document may be initiated via a front panel key depression or upon a remote contact closure.


In data logging, the user defines the items to be included in each data log as a print list. The user can also select when or how often he wishes a data log to be made. This is done during the setup of the instrument as either a time of day or as a time interval between logging.

The system setup and maintenance report list all the instrument setup parameters and usage for the current instrument configuration. In addition, the Audit trail information is presented as well as a status report listing any observed malfunctions which have not been corrected. The user initiates the printing of this report at a designated point in the menu by pressing the print key on the front panel.

### 9.4 ST1-SUM-FC RS-232 Port Pinout

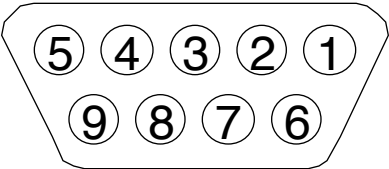

- 1 Handshake Line
- 2 Transmit
- 3 Receive
- 4 Optional Modem Power Out (+)
- 5 Ground
- 6 Optional Modem Power Out (+)
- 7 Do Not Use
- 8 Do Not Use
- 9 Do Not Use

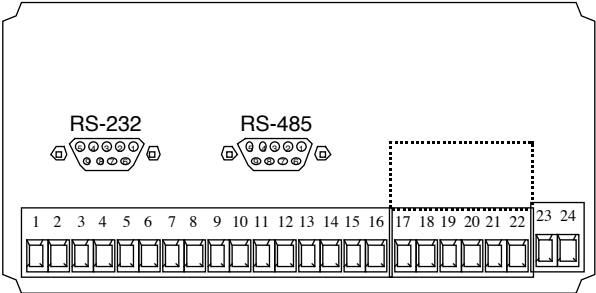

## 10. RS-485 Serial Port (optional)

### 10.1 RS-485 Port Description:

The ST1-SUM-FC has a an optional general purpose RS-485 Port which may be used for any one of the following purposes:

- Accessing Process Parameters
  - Sum, Flow1, Flow2 Rate, Temperatures, Densities, Viscosities, Set-points, Month, Day, Year, Hour, Minutes, Seconds, etc.
- Accessing System Alarms
  - System, Process, Self Test, Service Test Errors
- Accessing Totalizers
  - Sum, Flow1, Flow2 Totalizers and Grand Totalizers
- Executing Various Action Routines
  - Reset Alarms, Reset Totalizers, Print Transaction, Reset Error History

### 10.2 General

The optional RS-485 card utilizes Modbus RTU protocol to access a variety of process parameters and totalizers. In addition, action routines can be executed. See Appendix C for further information and details on this option.


### 10.3 Operation of Serial Communication Port with PC

The flow computer's RS-485 channel supports a number of Modbus RTU commands. Refer to port pinout (below) for wiring details. Modbus RTU drivers are available from third party sources for a variety of Man Machine Interface software for IBM compatible PC's.

The user reads and writes information from/to the RS-485 using the Modbus RTU commands. The ST1-SUM-FC then responds to these information and command requests.

Process variables and totalizers are read in register pairs in IEEE 32 bit floating point format. Time and date are read as a series of integer register values. Alarms are individually read as coils. Action routines are initiated by writing to coils.

### 10.4 ST1-SUM-FC RS-485 Port Pinout

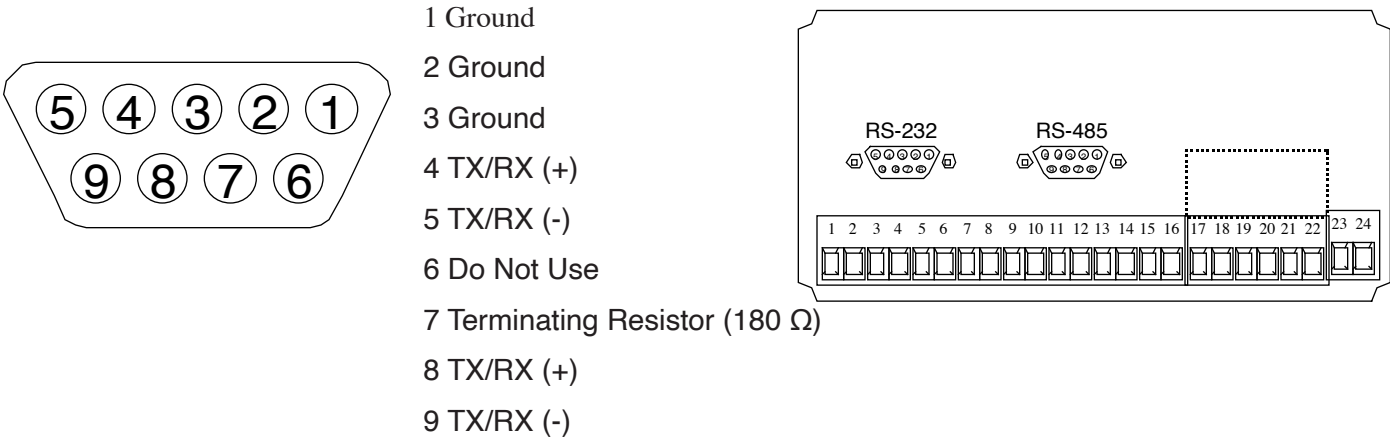

**NOTE:** To terminate cable end, connect Pin 7 to either Pin 4 or Pin 8.

## 11. Flow Computer Setup Software

The ST1-SUM-FC setup program provides for configuring, monitoring and controlling a ST1-SUM-FC unit over the RS-232 link.

Sample applications are stored in disk files. The setup program calls these *Templates*. You can store the setup from the program's memory to either the ST1-SUM-FC (*Downloading* the file) or to a disk file (*Saving* the file) for later usage. Similarly you can load the setup in program memory from either a disk file (*Opening* a file) or from the ST1-SUM-FC unit (*Uploading* a file).

The program can monitor outputs from the unit while it is running.

The program can reset alarms and totalizers.

For assistance there are mini-helps at the bottom of each screen in the program. There is also context sensitive help available for each screen accessible by pressing the F1 key.

### 11.1 System Requirements:

Windows® XP/Vista/7/8/10

4 MB RAM

3 MB free disk space

Communication Port - RS-232 (A USB to RS232 converter is required for PCs without RS-232 port)

RS-232 Cable -

Mounting Style "P" - Panel Mount units require a cable which matches the available communication port on your PC and a 9 pin male connection for the flow computer serial port.

Mounting Style "W" - Wall Mount units require a cable which matches the available communication port on your PC and a 4 wire connection to the terminal block on flow computer serial port. A RS232 DB 9 female to individual wires may be required in order to connect to the terminal block RS232 connector in this enclosure style.

### 11.2 Cable and Wiring Requirements:

The serial communication port on your PC is either a 25 pin or 9 pin connector. No cabling is supplied with the setup software. A cable must be purchased separately or made by the user. It is recommended to purchase a modem cable which matches the available communication port on your PC and a 9 pin male connection for the flow computer serial port.

### 11.3 Installation for Windows

It is good practice to quit all unnecessary programs running before beginning the installation procedure. In some instances, it may be required that anti-virus programs be disabled.

Software installation can be done either from a file downloaded from our website or from an installation disc provided with the product. To install from the disc, simply open the CD/DVD drive and insert the installation disc.

A setup wizard window should be launched. In case there is none, open the Explorer and navigate to the CD/DVD drive. Double click on the Setup file.

Once the wizard is running, simply follow the prompts until the installation process is completed.

For installation from the Web, launch your browser application and download the setup file to your hard drive.

After completion of the downloading process, run the setup program to execute the setup wizard that will handle the automatic installation of the software.

After the installation procedure has been completed and the setup wizard has terminated, it is best to reboot your machine before launching the newly installed software.

### 11.4 Using the Flow Computer Setup Software

The setup software window consists of several menu “Tabs”. Each tab is organized into groups containing various configuration and/or monitoring functions. To view the tab windows, simply click on the tab. The previous tab window will be hidden as the new tab window is brought to the foreground.

### 11.5 File Tab

The File Tab has three sections. Any of the options on this tab can also be accessed from the File submenu.

The **Template Section** provides for opening and saving templates. The *Save* and *Save As* buttons provide the standard Windows functionality for dealing with files. The *Open* button is used to open existing templates or files.

There are two additional menu items available *only* from the pull down File menu: *Open existing file* and *Templates*.

The *Open existing file*, option allows for creating custom templates using one of the existing template in memory as the starting point. Assign a new name for this new template. The template will be saved under this new name.

The *Open Template* option will bring up a list of predefined templates that can be loaded into the program. These predefined templates are useful as a starting point when defining custom templates.

A typical scenario using the setup program would be the following:

- Open up a predefined template from the supplied list
- Choose ‘Save As’ to save this to a new file name
- Proceed to customize the template by making any changes that are needed
- Save the setup to disk (if you want to reuse this template)
- Download the template to an attached unit.

The **Communications with ST1-SUM-FC Section** allows the user to upload the setup from the unit or download the setup to the unit.

The **Print (report) Section** allows the user to:

1. Configure the current Windows printer through the Select Printer option.
2. Print a Maintenance Report through the PC's printer using the Print Maintenance option.
3. Print the current setup through the PC's printer using Print Setup option.

### 11.6 Setup Tab

The Setup tab is where majority of the ST1-SUM-FC instrument setup modifications are done. The Setup tab is divided into five sections.

- System Section:** Flow Equation, Indicators
- Input Section:** Flow, Fluid, Aux 1 & 2 (Compensation Inputs 1 & 2), Control Inputs
- Output Section:** Pulse, Currents
- Relay Section:** Relays 1, 2, 3, 4
- Other Settings Section:** Administration, Communication, Serial Usage, Datalog Printing, Time Clock

**NOTE:** Many setup items are enabled or disabled depending on previous setup selections, It is important to work your way through the above list in the order shown. Be sure to verify your selections when you are through programming to insure that no settings were changed automatically.

## 11.7 View Tab

The View Tab screen allows for viewing selected group items on the PC in a similar format as shown on the unit display. Data from the following groups can be viewed in the List of Values section:

Process Parameters (i.e. rate, temperature)

Totalizers (i.e. total, grand total)

Error Log

Software Version

The setup software assumes the current setup has been uploaded from the flow computer into the PC. It is important that the setup program and the ST1-SUM-FC unit are using the same setup information at all times or the data will be inconsistent. It is best to upload or download the setup before using this feature.

To start the viewer, first check the boxes of items to view and then click the start button. The data will appear in the appropriate sections and will be continuously updated. The refresh rate is dependent on the number of items that are being viewed and the baud rate of the connection. Data in the List of Values section can be collapsed by clicking on the 'minus' sign in front of the group title. The data can be expanded by clicking on the 'plus' sign in front of the group title. If a group is collapsed and data in the group changes on refresh, the group will automatically expand. Changing the view items requires stopping the current viewing, checking the new selections and then restarting the viewer.

If communication errors occur while reading data from the ST1-SUM-FC device, the word 'Error' will appear in place of the actual value. If the connection to the ST1-SUM-FC is lost, the viewer will time out with a message saying the device is not responding.

The viewer will attempt to communicate with the ST1-SUM-FC device matching the device ID set in the communications screen. If you are having trouble establishing communication, compare settings for the PC and the flow computer. Also verify the connections between the PC and flow computer.

## 11.8 Misc. Tab

This tab has three sections: Tools, Actions and Options.

The tools section contains various system administration activities such as creating/modifying the initial sign-on screen.

Create Sign-on and Create Print Header

The Actions section is used to send commands to the ST1-SUM-FC unit.

Reset Totalizers, Reset Alarms, Reset Alarm History

The Options section has the following selections:

Network Card Setup

Additional capabilities may be provided in the future.

**NOTE:** Future options appear as disabled buttons on the screen.

## 12. Glossary Of Terms

### Acknowledge & Clear Alarms

Acknowledge is used to clear alarm relays and remove any visual alarm messages from the display. In the run mode, press the ENTER key or activate CONTROL INPUT 3 (if set for ACK) to momentarily clear alarms and alarm messages. Alarms will reassert themselves if alarm conditions are still present.

### Analog Output

The analog signal (4-20mA) that is generated by the ST1-SUM-FC. It can correspond to the Sum Flow Rate or Total. This output is used primarily for transmission of process information to remote systems.

### Audit Trail

The audit trail is used to track the number of changes made to the units setup program.

### Baud Rate

The speed of serial communication transmissions, expressed in bits per second.

### Calibration Temperature

The temperature at which a flow sensor was calibrated on a test fluid.

### C-Factor (Fluid Expansion Factor)

A parameter in a flow equation which is used to describe the relationship between density or volume and temperature changes.

### Corrected Volume Flow

The equivalently volume at a reference temperature condition which involves the measurement of liquid volume flow using a flow sensor and temperature sensor to compensate for thermal expansion.

### Custody Transfer

Weights and Measure metering codes often specify several requirements for instruments and mechanisms to prevent and track changes in the setup of an instrument which may be used in the commercial sale of goods. The ST1-SUM-FC tracks changes via the Audit Trail.

### Data Logger

The capturing of information for later use and the mechanism for specifying the conditions where a capture should be made.

### DC Output / Excitation Voltage

An on-board DC power supply used to power peripheral sensors. The ST1-SUM-FC offers excitation voltages of 5VDC, 12VDC or 24VDC when powered by AC voltage.

### Default Value

The value to be used by the instrument if a sensor failure or out of range signal is detected.

### Expansion Factor

See C-Factor

### Flow Alarm

A visual indication that the volumetric flowrate is above or below the flow alarm setpoint specified by the user.

### Flow Equation

A recognized relationship between the process parameters for flow, temperature, pressure and density used in flow measurements.

### Follow, Alarm

Alarm relays which are non latching and whose output state is based solely on the comparison of the current process value and the alarm setpoint (trip point).



## 12. Glossary Of Terms (Continued)

### Function Key

A key on a push-button panel or keyboard (whose function is described by the key label) used to perform an instrument function or special routine.

### Handshake

A means of controlling the information flow between two pieces of equipment to prevent the sending device from transmitting information at a rate faster than what can be accepted by the receiver.

### Hysteresis

The relay hysteresis is a "dead band" setting which allows the relay to remain energized for a given amount below the setpoint. This is used to prevent relay chatter when the process value is near the setpoint value.

Example: If the Preset is set at 100, and the hysteresis is set at 10, the relay will energize when the rate, temp or dens. reaches 100, the relay will remain energized until the reading falls below 90.

### Input Termination

Input signal lines on digital inputs often require pullup or pulldown resistor configurations to operate properly with different sensor configurations. The ST1-SUM-FC contains such resistors and may be enabled via the setup menu.

### Inhibit Totalizer

"*Inhibit Total*" is a Control Input 1 setting that is used to stop the totalization. If enabled, a voltage level on control input 1 will inhibit the total as long as the voltage is present. This feature is useful during meter proving and in applications that provide a sensor to signal the flow computer when fluid is present.

### K-Factor

A scaling factor derived from the pulses produced by a flowmeter output, expressed in pulses per unit (i.e. pulses/gallon)

### Limit Setpoint

An alarm trip point setting which specifies the value or magnitude of a process parameter necessary to activate an alarm indicator or control relay.

### Linear Flowmeter

A flow measurement device whose output is proportional to flow.

### Linearization

The mathematical correction of a nonlinear device. The ST1-SUM-FC uses a linearization Table which is made up of input/output values and makes interpolations of the table to arrive at a "linearized" measurement.

### LinTbl

Abbreviation for Linearization Table.

### Low Pass Filter

A low pass filter passes low input frequencies while blocking high frequencies. In the ST1-SUM-FC, this is the maximum input count speed to be encountered in an application. It is expressed in counts per second (Hz).

### Mass Flow

Mass Flow is inferred by the volumetric flow and density (or implied density) of a fluid.

### Max Window



## 12. Glossary Of Terms (Continued)

The max. window time sets the maximum sample time (1 to 99 sec) for the ratemeter.

### **Meter Expansion Coef.**

A coefficient in an equation which may be used to correct for changes in flowmeter housing dimensional changes with temperature.

### **Modem Init Master**

The "Modem Init Master" menu allows the user to select whether the unit will engage in a configuration conversation with the modem on power up or impart no setup information to the modem and use it "as is". For most users it is recommended to choose "yes" for "Modem Init Master".

### **Parity**

A method for detecting errors in transmissions of serial communications data.

### **Preset**

A set point used to trigger the relay outputs of the ST1-SUM-FC.

### **Print Interval**

The print interval allows the ST1-SUM-FC to transmit information to the serial port at selectable time intervals.

### **Private Code**

An operator password code which authorizes changes to the setup of the instrument but blocks access to the Service/Calibration/Test mode. The private code also blocks the clearing of the Grand Total.

### **Process Parameters**

Any sensor information which has been scaled to engineering units including Flow, Temperature and Density.

### **Pulldown (Input Termination)**

The termination of an input at which the input is pulled down to ground through a resistor. Inputs that are terminated by this method need to be driven high with a positive voltage pulse.

### **Pullup (Input Termination)**

The termination of an input at which the input is pulled up to a positive voltage through a resistor. Inputs that are terminated by this method need to be pulled low with a sinking current or contact to ground .

### **Pulse Output**

The pulse output of the ST1-SUM-FC is available for remote accumulation of the Sum total or sent to peripheral devices, such as a PLC. The output can be scaled using the Pulse Output Scaling Constant.

### **Quick Update %**

This feature is used to disable the rate averaging filter when a significant change in the flow rate occurs. The user can enter the percent of change needed to be detected to disable the averaging feature. This is especially useful during start-up and shutdown of flow.

### **Rate Averaging Filter**

The rate averaging filter is used to stabilize fluctuating rate displays. Higher settings provide more averaging for a more stable display. Derived from the equation:

## 12. Glossary Of Terms (Continued)

$$\frac{(\text{OLD DATA} \times \text{"Avg. Filter"} + \text{NEW DATA})}{(\text{"Avg. Filter"} + 1)}$$

**Ratometer**

Any device used to display the speed of a process. The ratemeter in the ST1-SUM-FC displays flow rate.

**Ref. Dens.**

Abbreviation for Reference Density. This is the fluid density at reference conditions of temperature.

**Ref. Temp.**

Abbreviation for Reference Temperature. This represents the base or reference condition to which corrected flow will be computed.

**Roshko**

A parameter defined as:  $R_o = \frac{f \bullet \text{temperature correction}}{cst_k}$

**STP Reference**

The users desired pressure and/or temperature to be considered as the reference condition in the computation of fluid properties or corrected volume conditions.

**Strouhal**

A calibration parameter defined as temperature corrected K-factor for a turbine flowmeter.

**Time Constant**

A damping factor for an averaging filter for the analog output. (see also Rate Averaging Filter)

**Totalizer**

Any device which accumulates and displays a total count.

**UVC**

Abbreviation for Universal Viscosity Curve. A presentation of the combined flowrate/viscosity calibration for a turbine flowmeter.

**VFD**

Abbreviation for Vacuum Fluorescent Display

**Visc Coef**

Abbreviation for Viscosity Coefficient. One or more coefficients in an equation used to describe the viscosity as a function of temperature for a fluid.

**Volume Flow**

The measurement of volumetric flow.

13. Diagnosis and Troubleshooting

13.1 Response of ST1-SUM-FC on Error or Alarm:

Error and warning indications which occur during operation are indicated in the RUN mode alternately with the measured values. The ST1-SUM-FC Flow Computer has three types of error:

| TYPE OF ERROR         | DESCRIPTION   |
|-----------------------|---|
| Sensor/Process Alarms | Errors detected due to sensor failure or process alarm conditions |
| Self Test Errors      | Errors detected during self test.                                 |
| System Alarms         | Errors detected due to system failure                             |

Some alarms are self clearing. Other alarms require the user to acknowledge and clear the alarm. Press the ENTER button to acknowledged and clear alarms. Alarms may reassert themselves if the alarm condition is still present.


**NOTE:** A historical error alarm log is available in the "Test Mode".

The following descriptions suggest possible causes and corrective actions for each alarm message.

13.2 Diagnosis Flow Chart and Troubleshooting

All instruments undergo various stages of quality control during production. The last of these stages is a complete calibration carried out on state-of-the-art calibration rigs.

A summary of possible causes is given below to help you identify faults.

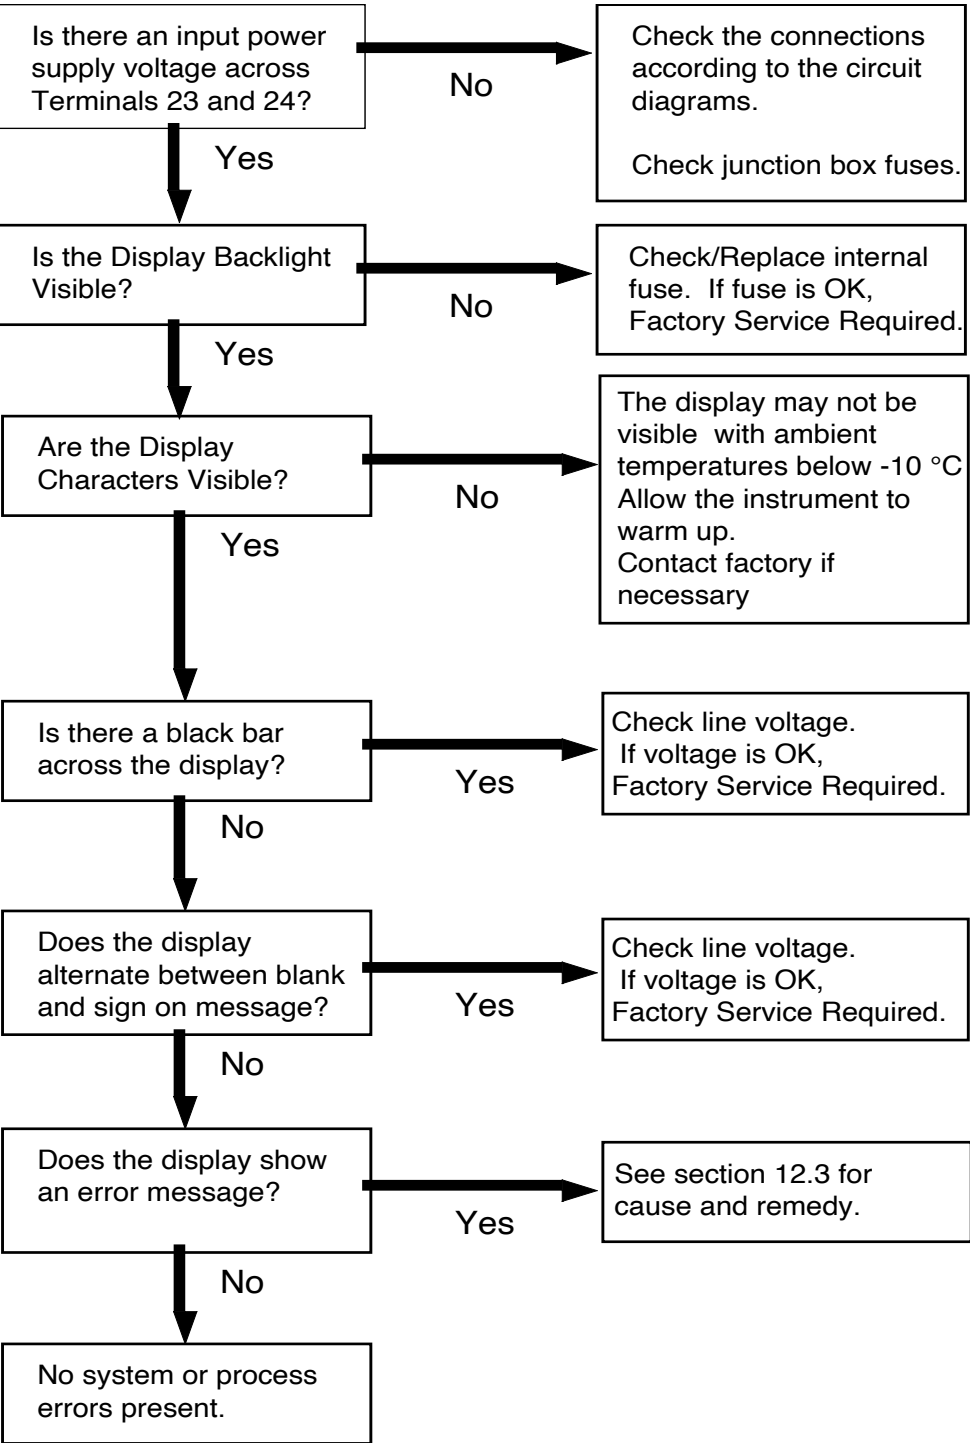



13.3 Error & Warning Messages:

13.3.1  
Sensor/Process Alarms

| Error/Warning Message   | Cause  | Remedy   |
|---|--|--|
| TOTALIZER ROLLOVER  | Displayed when totalizer rolls over  | Acknowledge Rollover, Remedy not required  |
| AUX INPUT TOO LOW!  | 4-20 mA Input current at aux input smaller than 3.5 mA: <ul style="list-style-type: none"><li>Faulty Wiring</li><li>Transmitter not set to "4-20 mA"</li><li>Transmitter defective</li></ul> | <ul style="list-style-type: none"><li>Check wiring</li><li>Check function of sensor</li></ul>  |
| RATE OVERFLOW ERROR   | Pulse counter overflowed. The totalizer may have lost counts.  | <ul style="list-style-type: none"><li>Report error to factory</li><li>Check application conditions</li><li>Check wiring</li></ul>  |
| PULSE OUT OVERFLOW  | Calculated pulse frequency too large: <ul style="list-style-type: none"><li>Pulse width setting too long</li><li>Larger pulse scaler needed</li></ul>  | <ul style="list-style-type: none"><li>Adjust pulse value</li><li>Adjust pulse width</li><li>Check process conditions</li></ul>   |
| FLOW RATE 1<br>LOW ALARM<br>FLOW RATE 1<br>HIGH ALARM<br><br>FLOW RATE 2<br>LOW ALARM<br>FLOW RATE 2<br>HIGH ALARM<br><br>SUM FLOW RATE<br>LOW ALARM<br>SUM FLOW RATE<br>HIGH ALARM<br><br>TEMP 1 LOW ALARM<br>TEMP 1 HIGH ALARM<br><br>TEMP 2 LOW ALARM<br>TEMP 2 HIGH ALARM | Limit value exceeded.  | <ul style="list-style-type: none"><li>Check application if necessary</li><li>Check limit value</li><li>Adjust the limit value if required</li></ul>                              |
| MODEM NOT PRESENT   | The setup expects modem usage and a modem is not responding.   | <ul style="list-style-type: none"><li>Check setup for proper baud rate, parity, etc.</li><li>Check modem connection and cycle power to the unit.</li><li>Replace modem</li></ul> |
| SOFTWARE ERROR<br>RESET   | Abnormal program execution has occurred. Problem was self diagnosed and logged.  | <ul style="list-style-type: none"><li>Report error to factory</li></ul>  |
| EXTENDED PFI LOCKUP   | Unit was operated with an input power level lower than safe operating range for an extended period of time.  | <ul style="list-style-type: none"><li>Check data in unit. Totalizer may have inaccuracies</li><li>Investigate brownout cause.</li></ul>  |

13.3 Error & Warning Messages: (Continued)

13.3.2  
Self Test Alarms

| Error/Warning Message | Cause   | Remedy  |
|-----------------------|---|---|
| AUX INPUT TOO HIGH!   | Analog input signal of the auxiliary input exceeded by more than 3%: <ul style="list-style-type: none"><li>• Sensor overranged</li><li>• Incorrect full scale setting of transmitter</li><li>• Function error in transmitter or faulty wiring</li></ul> | <ul style="list-style-type: none"><li>• Check analog signal range</li><li>• Check the application conditions</li><li>• Check wiring</li></ul>                                   |
| BATTERY LOW WARNING   | Battery voltage too low   | <ul style="list-style-type: none"><li>• Replace Battery</li><li>• Consult Factory for service information</li></ul>   |
| A to D NOT CONVERTING | Fault in analog/digital converter   | <ul style="list-style-type: none"><li>• Unit may self correct, Press ENTER to acknowledge &amp; clear alarm</li><li>• If error reasserts, factory service is required</li></ul> |
| TIME CLOCK ERROR      | The correct time/date is no longer shown  | <ul style="list-style-type: none"><li>• Re-enter time and date.</li><li>• If error occurs again contact factory</li></ul>   |
| CAL CHECKSUM ERROR    | Calibration constants have been corrupted   | <ul style="list-style-type: none"><li>• Report error to factory</li></ul>   |
| SETUP CHECKSUM ERROR  | The units setup has been corrupted  | <ul style="list-style-type: none"><li>• Report error to factory</li></ul>   |

Appendix A

Fluid Properties Table

LIQUID

| FLUID       | REF. DENSITY (lb./gal) | REF. TEMP. (°F) | COEFF. OF EXPANSION (e-6 format) | LIQ.VISC. ANDREDE's EQUATION COEFF. "A" | VISCOSITY BY ANDREDE's EQUATION COEFF. "B" |
|-------------|------------------------|-----------------|----------------------------------|---|--|
| AIR         | 7.2947                 | -317.8          | 1626.2                           | 0.172                                   | 0  |
| AMMONIA     | 5.6996                 | -28.2           | 570.4                            | 0.00157                                 | 2228.25                                    |
| ARGON       | 11.6172                | -302.6          | 1486.1                           | 0.011291                                | 511.34                                     |
| CO2         | 8.735                  | -10.0           | 1260.9                           | 0.000001                                | 5305.44                                    |
| METHANE     | 3.5404                 | -258.7          | 1052.3                           | 0.006819                                | 526.08                                     |
| NATURAL GAS | 3.5404                 | -258.7          | 1052.3                           | 0.006819                                | 526.08                                     |
| NITROGEN    | 6.7438                 | -320.4          | 1491.7                           | 0.006524                                | 434.94                                     |
| OXYGEN      | 9.5208                 | -297.4          | 1345.8                           | 0.019773                                | 340.29                                     |
| PROPANE     | 4.2344                 | 60              | 717.8                            | 0.009969                                | 1267.35                                    |
| Nx-19       | 3.5404                 | -258.7          | 1052.3                           | 0.006819                                | 526.08                                     |
| GASOLINE    | 6.2572                 | 60              | 370.3                            | 0.045617                                | 1432.26                                    |
| KEROSENE    | 6.9243                 | 60              | 268.1                            | 0.004378                                | 3245.78                                    |
| No. 2 FUEL  | 7.8843                 | 60              | 88.5                             | 0.000453                                | 4946.15                                    |
| WATER       | 8.3389                 | 60              | 101.5                            | 0.001969                                | 3315.61                                    |

GAS

| FLUID    | REF. DENSITY (lb./ft³) | REF. TEMP. (°F) | REF. Z FACTOR (14.696 PSIA) | Z FACTOR AT 100 PSIA and 60°F | VISCOSITY BY ANDREDE's EQUATION COEFF. "A" | VISCOSITY BY ANDREDE's EQUATION COEFF. "B" |
|----------|------------------------|-----------------|-----------------------------|-------------------------------|--|--|
| AIR      | 0.076                  | 60              | 1                           | 0.997                         | 0.000138                                   | 0.775522                                   |
| AMMONIA  | 0.045                  | 60              | 1                           | 0.955                         | 0.000013                                   | 1.05951                                    |
| ARGON    | 0.105                  | 60              | 1                           | 0.995                         | 0.00021                                    | 0.750757                                   |
| CO2      | 0.116                  | 60              | 1                           | 0.954                         | 0.000049                                   | 0.91136                                    |
| METHANE  | 0.042                  | 60              | 1                           | 0.970                         | 0.000018                                   | 1.015892                                   |
| NAT. GAS | 0.0456                 | 60              | 1                           | 0.970                         | 0.000018                                   | 1.015892                                   |
| NITROGEN | 0.074                  | 60              | 1                           | 0.998                         | 0.000202                                   | 0.7128734                                  |
| OXYGEN   | 0.084                  | 60              | 1                           | 0.995                         | 0.000169                                   | 0.761811                                   |
| PROPANE  | 0.116                  | 60              | 1                           | 0.870                         | 0.00002                                    | 0.952092                                   |
| Nx-19    | 0.0456                 | 60              | 1                           | 0.97                          | 0.000018                                   | 1.015892                                   |



Appendix B

ST1-SUM-FC SETUP MENUS

START HERE

|                           |                              |                       |                       |                       |                        |                        |
|---------------------------|------------------------------|-----------------------|-----------------------|-----------------------|------------------------|------------------------|
| SELECT FLOW EQUATION      | DENS EXTRACT METHOD          | SELECT FLOW EQUATION  | DENS EXTRACT METHOD   | TEMPERATURE SCALE     | TEMPERATURE DEC PLACES | TEMPERATURE DEFAULT    |
| SETUP INDICATORS          | TOTAL DESCRIPTOR             | VOLUME UNITS          | TOTAL DEC PLACES      | MASS UNITS            | DENSITY DEC PLACES     | DENSITY DEFAULT        |
| SETUP FLOW INPUT          | PULSE TRIGGER TYPE           | LOW PASS FILTER       | INPUT TERMINATION     | MAX WINDOW            | K-FACTOR TYPE          | AVERAGE KA-FACTOR      |
| SETUP AUX1 INPUT          | AUX1 SIGNAL TYPE             | CURRENT RANGE         | AUX LOW SCALE         | AUX FULL SCALE        | OFFSET TEMPERATURE     | AUX LOW ALARM          |
| SETUP AUX2 INPUT          | AUX2 SIGNAL TYPE             | VOLTAGE RANGE         | CURRENT RANGE         | AUX LOW SCALE         | AUX FULL SCALE         | AUX LOW ALARM          |
| SET FLUID PROPERTIES      | FLUID NUMBER 0 – 9           | FLUID NAME            | REF. DENSITY          | REF. TEMPERATURE      | EXPANSION FACTOR       | VISCOSITY COEF. A      |
| SETUP PULSE OUTPUT        | PULSE OUTPUT USAGE           | PULSE WIDTH           | PULSE VALUE           | RELAY USAGE           | ASSIGN AUX CHANNEL     | RELAY DELAY            |
| SETUP ANALOG OUTPUT       | ANALOG OUTPUT RANGE          | ANALOG OUT LOW SCALE  | ANALOG OUT FULL SCALE | ANALOG OUT DAMPING    | RELAY DURATION         | RELAY MODE             |
| SETUP RELAYS              | SETUP RELAYS 1, 2, 3, 4      | RELAY USAGE           | RELAY DELAY           | RELAY SETPOINT        | RELAY HYSTERESIS       | RELAY SETPOINT         |
| SETUP CONTROL INPUTS      | SETUP CONTROL INPUTS 1, 2, 3 | CONTROL INPUT 1 USAGE | CONTROL INPUT 2 USAGE | CONTROL INPUT 3 USAGE | RELAY SETPOINT         | RELAY HYSTERESIS       |
| SETUP REAL TIME CLOCK     | SETUP REAL TIME CLOCK        | CLOCK TYPE            | SELECT CLOCK AM/PM    | TIME OF DAY           | ENTER DATE             | RELAY SETPOINT         |
| SERIAL USAGE              | SERIAL HARDWARE              | DEVICE ID             | BAUD RATE             | PARITY                | HANDSHAKE              | DEVICE LINE FEED       |
| SETUP SETUP DATALOG/PRINT | SETUP DATALOG/PRINT          | OUTPUT FORMAT         | PAGE LENGTH           | TOP MARGIN            | DATALOG ONLY           | PRINT TIME             |
| ADMINISTRATIVE SETUP      | TAG NUMBER                   | OPERATOR PASSWORD     | SUPERVISOR PASSWORD   | SOFTWARE VERSION      | PRODUCT ORDER CODE     | UNIT SERIAL NUMBER     |
| SETUP NETWORK CARD        | SELECT NETWORK PROTOCOL      | NETWORK DEVICE ID     | BAUD RATE             | PARITY                | SENSOR SERIAL NUMBER   | DISPLAY NEW ERROR ONLY |

These functions will only appear with appropriate settings in other functions.

**Appendix C - RS485 Modbus RTU Protocol**

**Introducing ST1-SUM-FC with RS-485 & Modbus RTU Protocol**

When the ST1-SUM-FC is equipped with the RS-485 communication option, the protocol it uses is the Modbus RTU protocol. This protocol defines a message structure that hosts and clients will recognize and use on the RS-485 network over which they communicate. It describes the process a master device (PC compatible) uses to request access to another device (ST1-SUM-FC), how it will respond to requests from the other devices, and how errors will be detected and reported. It establishes a common format for the layout and contents of message fields.

During communications on a Modbus RTU network, the protocol determines how each ST1-SUM-FC will know its device address, recognize a message addressed to it, determine the kind of action to be taken, and extract any data or other information contained in the message. If a reply is required, the ST1-SUM-FC will construct the reply message and send it using Modbus RTU protocol.

**RTU Mode**

The ST1-SUM-FC with RS-485 communications option supports the Modbus RTU (Remote Terminal Unit) mode only. The Modbus ASCII mode is not supported. The main advantage of the RTU mode is that its greater character density allows better data throughput than ASCII for the same baud rate. The Modbus RTU uses a Master-Slave Query-Response Cycle in which the ST1-SUM-FC is the slave device.


**Control Functions**

The ST1-SUM-FC with RS-485 communications option supports the following function codes:


| CODE | NAME                      | DESCRIPTION  |
|------|---------------------------|--|
| 01   | Read Coil Status          | Read a single coil   |
| 03   | Read Holding Register     | Read a range of holding registers  |
| 05   | Force Single Coil         | Forces a single coil (0x reference) to either ON or OFF                    |
| 06   | Preset Single Register    | Presets a value into a single holding register (4x reference)              |
| 15   | Force Multiple Coil       | Forces each coil (0x reference) in a sequence of coils to either ON or OFF |
| 16   | Preset Multiple Registers | Presets values into a sequence of holding registers (4x reference)         |

Appendix C - RS485 Modbus RTU Protocol

ST1-SUM-FC RS-485 Port Pinout (recommended mating connector: DB-9M)

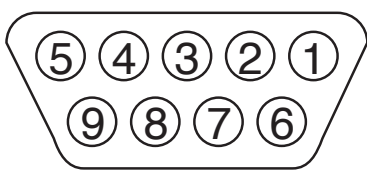


- 1 Ground
- 2 Ground
- 3 Ground
- 4 TX/RX (+)
- 5 TX/RX (-)
- 6 Do Not Use
- 7 Terminating Resistor (180 Ω)
- 8 TX/RX (+) (spare internally connected to 4)
- 9 TX/RX (-) (spare internally connected to 5)

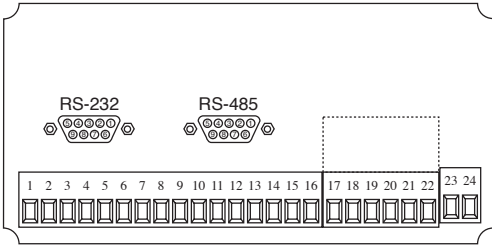

ST1-SUM-FC RS-485 Port Pinout (Terminal Block Option)

- 1 Common
- 2 TX/RX (+)
- 3 TX/RX (-)
- 4 Terminating Resistor (180Ω)

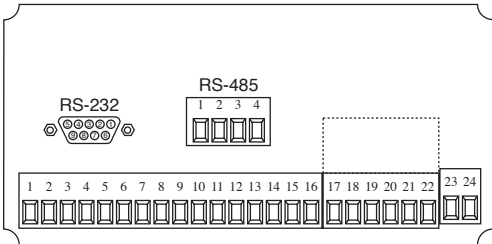

Installation Overview

A two wire RS-485 may be multidropped up to 4000 ft. and up to 32 units may be chained together. A RS-485 to RS-232 interface adapter is required at the PC. An optically isolated type is recommended. Suitable wiring should be selected based on anticipated electrical interference. Terminators should be used to help improve the quality of electronic signals sent over the RS-485 wires. The RS-485 chain should be terminated at the beginning (RS-485 adaptor) and at the last device in the RS-485 chain and nowhere else. On the ST1-SUM-FC this is accomplished by connecting a jumper from terminal 7 to terminal 4 or 8 at the RS-485 port when DB-9 connector is used. Place jumper between terminals 2 and 4 when the terminal block option is used. If lightning protection is required, a suitable surge protector should be used.

For additional information, refer to the technical requirements of EIA-485, interface adaptor user manual and the communication software user manual

ST1-SUM-FC Communication Setup Menu

The setup menu allows Modbus RTU Protocol communications parameters of: Device ID, Baud Rate, and Parity to be selected to match the parameters of your RS-485 network. Each ST1-SUM-FC must have it's own Device ID and the same Baud Rate and Parity setting.

Appendix C - RS485 Modbus RTU Protocol

Register & Coil Usage

Register Usage (each register is 2 bytes)

| ST1-SUM-FC Data         | Register          | Data Type | Access     |
|-------------------------|-------------------|-----------|------------|
| Sum Flow Rate *         | Reg 40001 & 40002 | Float     | Read       |
| Sum Total *             | Reg 40005 & 40006 | Float     | Read       |
| Sum Grand Total *       | Reg 40007 & 40008 | Float     | Read       |
| Temperature 1           | Reg 40009 & 40010 | Float     | Read       |
| Density 1               | Reg 40011 & 40012 | Float     | Read       |
| Preset 1                | Reg 40013 & 40014 | Float     | Read/Write |
| Preset 2                | Reg 40015 & 40016 | Float     | Read/Write |
| Preset 3                | Reg 40017 & 40018 | Float     | Read/Write |
| Preset 4                | Reg 40019 & 40020 | Float     | Read/Write |
| Year                    | Reg 40021         | Integer   | Read       |
| Month                   | Reg 40022         | Integer   | Read       |
| Day                     | Reg 40023         | Integer   | Read       |
| Hours                   | Reg 40024         | Integer   | Read       |
| Minutes                 | Reg 40025         | Integer   | Read       |
| Seconds                 | Reg 40026         | Integer   | Read       |
| Viscosity 1             | Reg 40027 & 40028 | Float     | Read       |
| Transaction Number      | Reg 40029         | Integer   | Read       |
| Unused                  | Reg 40030         | —         | —          |
| Unused                  | Reg 40031 & 40032 | —         | —          |
| Unused                  | Reg 40033 & 40034 | —         | —          |
| Unused                  | Reg 40035 & 40036 | —         | —          |
| Pulse Input 1 Frequency | Reg 40037 & 40038 | Float     | Read       |
| Pulse Input 2 Frequency | Reg 40039 & 40040 | Float     | Read       |
| KA Factor               | Reg 40041 & 40042 | Float     | Read       |
| KB Factor               | Reg 40043 & 40044 | Float     | Read       |
| Fluid Number            | Reg 40045         | Integer   | Read/Write |
| Unused                  | Reg 40046         | —         | —          |
| Temperature 2           | Reg 40047 & 40048 | Float     | —          |
| Density 2               | Reg 40049 & 40050 | Float     | —          |
| Viscosity 2             | Reg 40051 & 40052 | Float     | —          |
| Rate 1                  | Reg 40053 & 40054 | Float     | —          |
| Rate 2                  | Reg 40055 & 40056 | Float     | —          |
| Total 1                 | Reg 40057 & 40058 | Float     | —          |
| Grand Total 1           | Reg 40059 & 40060 | Float     | —          |
| Total 2                 | Reg 40061 & 40062 | Float     | —          |
| Grand Total 2           | Reg 40063 & 40064 | Float     | —          |

\* Parameters are active only when the instrument is configured for these calculations.  
**NOTE:** The Float data type follows the IEEE format for a 32 bit float.

COIL USAGE (each coil is 1 bit)

| ST1-SUM-FC Data                        | Coil       | Data Type | Access |
|--|------------|-----------|--------|
| Error-Pulse Out Overflow               | Coil 00001 | bit       | Read   |
| Alarm-Flow Rate Alarm Low Volume Rate  | Coil 00002 | bit       | Read   |
| Alarm-Flow Rate Alarm High Volume Rate | Coil 00003 | bit       | Read   |
| Alarm-Temp Alarm Low 1                 | Coil 00004 | bit       | Read   |
| Alarm-Temp Alarm High 1                | Coil 00005 | bit       | Read   |
| Alarm-Temp Alarm Low 2                 | Coil 00008 | —         | —      |
| Alarm-Temp Alarm High 2                | Coil 00009 | —         | —      |
| Unused                                 | Coil 00010 | —         | —      |
| Unused                                 | Coil 00011 | —         | —      |
| Unused                                 | Coil 00012 | —         | —      |
|  | Coil 00013 | —         | —      |

Appendix C - RS485 Modbus RTU Protocol

Register & Coil Usage (continued)

| ST1-SUM-FC Data                            | Coil       | Data Type | Access     |
|--|------------|-----------|------------|
| Reserved                                   | Coil 00014 | bit       | Read       |
| Error-Software Error Reset                 | Coil 00015 | bit       | Read       |
| Error-Extended PFI Lockup                  | Coil 00016 | bit       | Read       |
| Unused                                     | Coil 00017 | —         | —          |
| Unused                                     | Coil 00018 | —         | —          |
| Error-Cal Checksum Error                   | Coil 00019 | bit       | Read       |
| Error-Modem Not Found                      | Coil 00020 | bit       | Read       |
| Error-Setup Checksum Error                 | Coil 00021 | bit       | Read       |
| Error-Rate Overflow Error                  | Coil 00022 | bit       | Read       |
| Error-A to D Not Converting                | Coil 00023 | bit       | Read       |
| Error-Aux Input Too Low                    | Coil 00024 | bit       | Read       |
| Error-Aux Input Too High                   | Coil 00025 | bit       | Read       |
| Error-Flow Input Too Low                   | Coil 00026 | bit       | Read       |
| Error-Flow Input Too High                  | Coil 00027 | bit       | Read       |
| Reserved                                   | Coil 00028 | bit       | Read       |
| Error-RTD Out Of Range                     | Coil 00029 | bit       | Read       |
| Warning-Battery Low Warning                | Coil 00030 | bit       | Read       |
| Error-Time Clock Error                     | Coil 00031 | bit       | Read       |
| Warning-Totalizer Rollover                 | Coil 00032 | bit       | Read       |
| Command-Reset Total                        | Coil 00033 | bit       | Read/Write |
| Command-Reset Errors                       | Coil 00034 | bit       | Read/Write |
| Command-Print Command                      | Coil 00035 | bit       | Read/Write |
| Status-Instrument Type Rate/Total or Batch | Coil 00036 | bit       | Read       |
| Reserved                                   | Coil 00037 | bit       | Read/Write |
| Reserved                                   | Coil 00038 | bit       | Read/Write |
| Reserved                                   | Coil 00039 | bit       | Read/Write |
| Reserved                                   | Coil 00040 | bit       | Read       |
| Reserved                                   | Coil 00041 | bit       | Read       |
| Reserved                                   | Coil 00042 | bit       | Read       |
| Command-Relay 1 Command**                  | Coil 00043 | bit       | Read/Write |
| Command-Relay 2 Command**                  | Coil 00044 | bit       | Read/Write |
| Command-Relay 3 Command**                  | Coil 00045 | bit       | Read/Write |
| Command-Relay 4 Command**                  | Coil 00046 | bit       | Read/Write |
| Status-Relay 1 Status                      | Coil 00047 | bit       | Read       |
| Status-Relay 2 Status                      | Coil 00048 | bit       | Read       |
| Status-Relay 3 Status                      | Coil 00049 | bit       | Read       |
| Status-Relay 4 Status                      | Coil 00050 | bit       | Read       |
| Status-Control 1 Status                    | Coil 00051 | bit       | Read       |
| Status-Control 2 Status                    | Coil 00052 | bit       | Read       |
| Status-Control 3 Status                    | Coil 00053 | bit       | Read       |
| Unused                                     | Coil 00054 | —         | —          |
| Unused                                     | Coil 00055 | —         | —          |
| Unused                                     | Coil 00056 | —         | —          |
| Unused                                     | Coil 00057 | —         | —          |
| Unused                                     | Coil 00058 | —         | —          |
| Unused                                     | Coil 00059 | —         | —          |
| Unused                                     | Coil 00060 | —         | —          |
| Unused                                     | Coil 00061 | —         | —          |
| Unused                                     | Coil 00062 | —         | —          |
| Unused                                     | Coil 00063 | —         | —          |
| Unused                                     | Coil 00064 | —         | —          |

\*\* Relay commands are only active if relays have been configured for “NA” (not assigned) in the setup menus.